



All types

Every 45 000 km / 30 000 miles

Tightening torque	Nm	(kpm)
Fastening bolts for	oil pan with cork gasket	8 (0.8)
	oil pan with rubber gasket	7 (0.7)

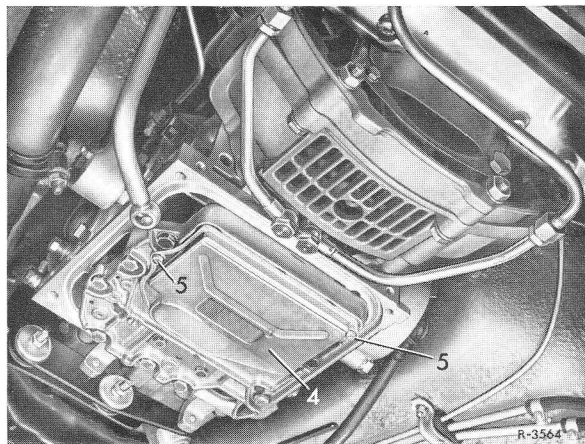

Transmission Version K 4 C 025, K 4 C 025 reinforced, K 4 A 040, W 3 A 040, W 4 B 025.

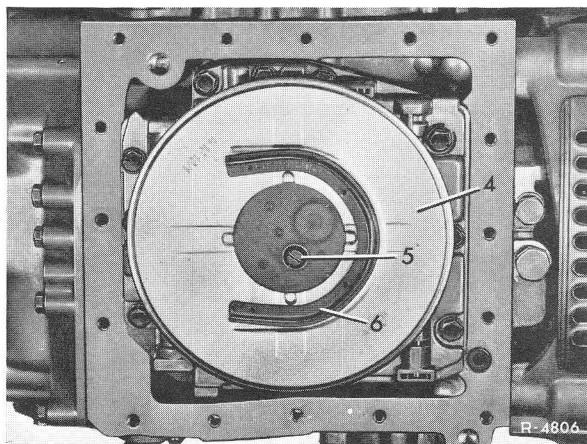

Transmission version K 4 025, K 4 B 050

### Note

Replacement of oil filter and oil change are completed at the same time (refer to item 170).

- Remove transmission oil pan after draining oil.
- Replace oil filter.
- Mount transmission oil pan with new gasket, while tightening fastening bolts to specified tightening torque.
- Add oil (refer to item 170).