


Every 15 000 km / 10 000 miles

Type 107 108 109 111 116

- Check brake discs for scoring and cracks. Scores up to 0,5 mm deep in circumferential direction are permissible.
- Strongly contaminated brake disks are distinguished by their grey or blue color of the brake areas and should be cleaned with cleaning pads.

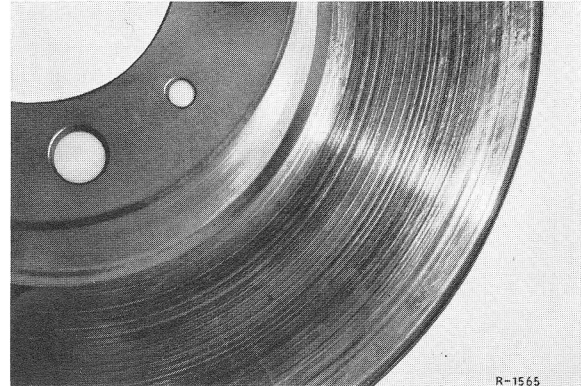

- Clean the air ducts of ventilated brake discs with a thin piece of wire, observing that the balancing clamps are not knocked out of the air ducts. Blow out the dirt loosened in this way from the ducts with compressed air.

Note

Heavily clogged air passages can be cleaned only upon removal of the brake discs in a washing plant.

