

Removal

- 1 Remove exhaust system (49.1–100).
- 2 Disconnect draw spring on holder (2) (Fig. 1).

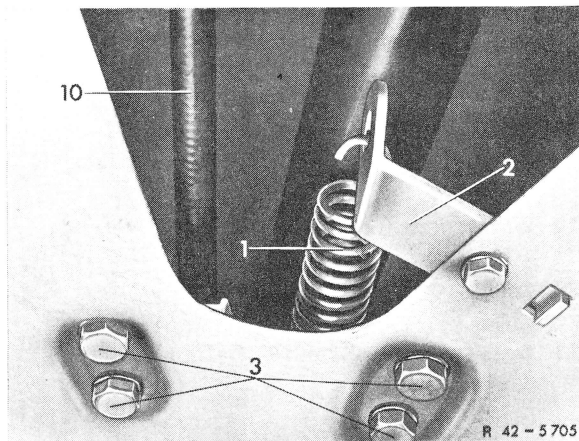


Fig. 1
 1 Draw spring
 2 Holder
 3 Hex. bolt
 10 Brake cable control

- 3 Unscrew hex. bolts (5) for attaching guide (4) for intermediate lever (6) (Fig. 2 and 3).

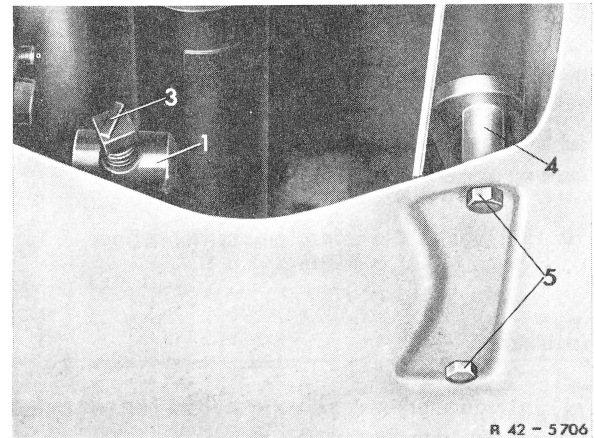


Fig. 2
 1 Adjusting bracket
 3 Adjusting screws
 4 Guide for intermediate lever
 5 Hex. screw

- 4 Completely unscrew adjusting screw (3) of adjusting bracket (1) (Fig. 2).
- 5 Disconnect intermediate lever (6) on bearing of frame floor (2) and remove from adjusting bracket (1) (Fig. 3).
- 6 Loosen brake cable controls on intermediate lever (6), while pulling cotter pin from flange bolt and remove flange bolt (Fig. 3).

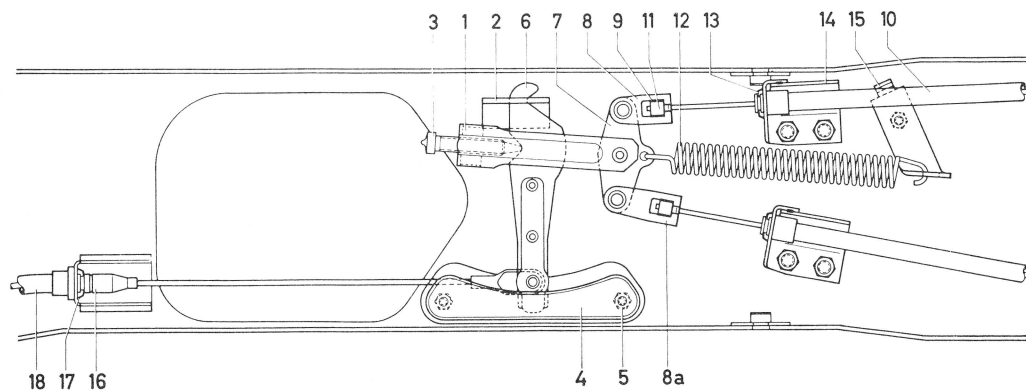


Fig. 3
 1 Adjusting bracket
 2 Bearing on frame floor
 3 Adjusting screw
 4 Guide for intermediate lever
 5 Hex. screw
 6 Intermediate lever
 7 Compensating lever
 8 Cable control plate
 8a Cable control plate
 9 Hose piece
 10 Rear brake cable control
 11 Adapter
 12 Draw spring
 13 Spring clamp
 14 Holder for rear brake cable control
 15 Holder for draw spring
 16 Rubber sleeve
 17 Spring clamp
 18 Front brake cable control

42.1 Removal and Installation of Front Brake Cable Control

7 Remove spring clamp (17) from cable guide and pull brake cable control (18) from holder (Fig. 3).

8 Remove legroom cover (42.1–510 Item 7).

9 Disconnect brake cable control (17) from plate of parking brake. Remove spring clamp (20) from cable guide and remove brake cable control from parking brake (42.1–510, Fig. 3 and 6).

10 Pull brake cable control out of frame floor toward the rear.

Installation

11 Introduce brake cable control from below through frame floor and attach rubber sleeve.

12 Attach brake cable control (17) into cable control plate of parking brake and insert spring clamp (42.1–510, Fig. 3 and 6).

13 Install legroom cover (42.1–510 Item 19 and 20).

14 Introduce cable control into holder on frame floor and attach with spring clamp (17) (Fig. 3).

15 Attach rubber sleeve (16) to cable guide (Fig. 3).

16 Attach brake cable control to intermediate lever with flange bolt and secure.

17 Introduce intermediate lever (6) into adjusting bracket (1). Then attach intermediate lever to bearing on frame floor (2) (Fig. 3).

18 Screw-on guide for intermediate lever (4) (Fig. 2 and 3).

19 Attach draw spring (1) to holder (2) (Fig. 1).

20 Adjust parking brake (42.1–540).

21 Install exhaust system (49.1–100).