

82.1 Adjustment of Fog Lights

Adjust fog lights by shifting or swivelling entire fog light housing after slightly loosening screws (1). Then tighten screws (1) well again making sure that the adjustment is not changed.

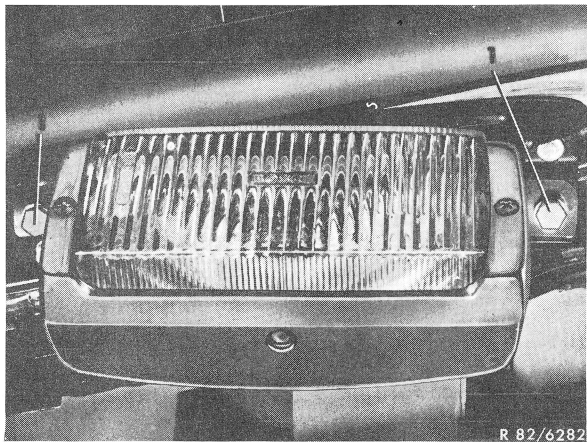


Fig.1

1 Fastening and adjusting screws