



8458

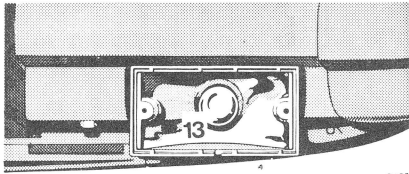


8459

Fig. 1
Turnsignal and parking light
11 Screw
12 Lens
13 Bulb

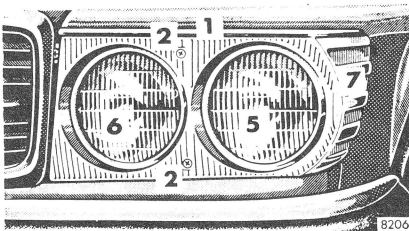

8206

Fig. 2
1 Cover
2 Screws

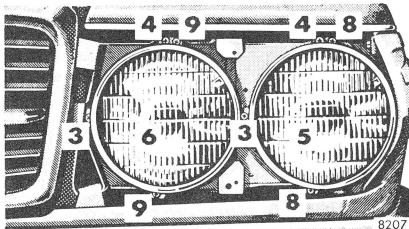

8207

Fig. 3
5 Sealed beam unit
8 Screw

A) Replacement of Front Turnsignal and Parking Light Bulb


- 1) Unscrew screws (11) and remove lens (12).
- 2) Depress bulb (13), turn left and pull out.
- 3) For installation reverse above procedure.

NOTE: Make sure that the tab on the inside of the lens is on the bottom.

B) Replacement of Bulbs in Side Marker Light, Front

For replacement of the bulb in the side marker light (7), proceed as follows:

- 1) Unscrew screws (2) and remove cover (1) (Fig. 2).
- 2) Remove outside sealed beam unit (5) by unscrewing screws (8) (Fig. 3).
- 3) Remove screw (10) and detach lamp holder. Depress bulb and turn counter clockwise and pull out (Fig. 4)
- 4) For installation reverse above procedure.

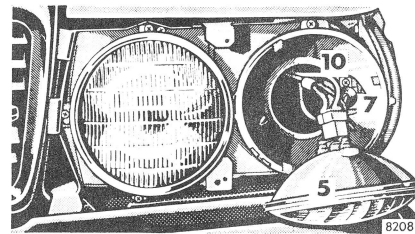


8208

Fig. 4
5 Sealed beam unit
10 Lamp holder

C) Replacement of Bulbs in Tail Light Assembly

- 1) Unscrew both knurled nuts on the inside of the trunk and remove the inner tail light housing. Replace bulbs as required.

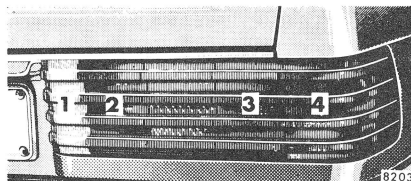

8203

 


Fig. 5
1 Backup light
2 Stop light
3 Parking light/tail light
4 Turnsignal light (round bulb)
Side marker light (festoon lamp)
behind round bulb