

# 68.1 Removal and Installation of Weather Strip on Windshield Post

---

107

## Weather Strip on Roadster

---

### Removal

- 1 Remove coupe top or open roadster top.
- 2 Lift rubber lip in range of fastening screws from weather strip by means of a wedge.
- 3 Remove the four screws.
- 4 Remove weather strip from base and lift off.

### Installation

---

- 5 For installation proceed vice versa. Insert screws starting at the top, while simultaneously pushing weather strip against windshield post.

## Weather Strip on Coupe

---

### Removal

- 1 Remove sealing rail at top in range of crank window.
- 2 Unscrew the four screws on weather strip.
- 3 Pull weather strip on front wall pillar out of clips and remove.

### Installation

---

- 4 For installation proceed vice versa.