

# 75.1 Removal and Installation of Tank Flap

---

107.

## Removal

---

### Tank flap with holding clip

- 1 Remove both screws (1).
- 2 Remove tank flap (4) with holding clip (3).

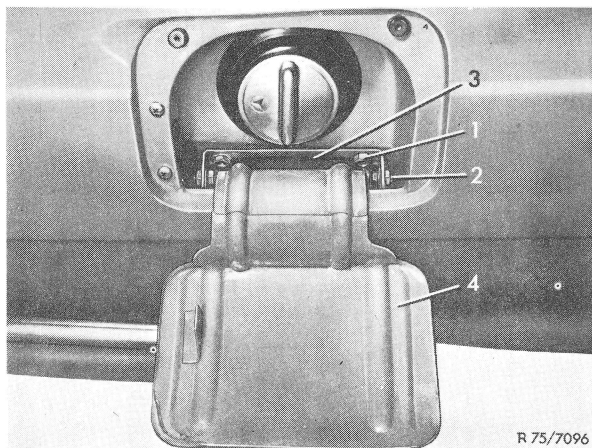


Figure 1

- |                           |                |
|---------------------------|----------------|
| 1 Screws for holding clip | 3 Holding clip |
| 2 Screws for tank flap    | 4 Tank flap    |

### Tank flap without holding clip

- 3 Remove both screws (2).

## Installation

---

- 4 For installation proceed vice versa.

Make sure that the sealing washers under holding clip are correctly installed. Then adjust tank flap.