

Removal

- 1 Remove sliding roof cover (77.0-100).
- 2 Actuate sliding roof switch in direction of "closing", permit teleflex cable control (27) to run completely forward and pull out (Fig. 1).

Note: If the teleflex cable control cannot be moved by means of the electric drive, use hand crank.

If the teleflex cable control cannot be activated in this manner, insert a mandrel into bore for connecting clip and remove cable control by turning clockwise.

Do not continue turning, if too much force is required, since this would cause the cable control to untwist and become stuck in teleflex tube.

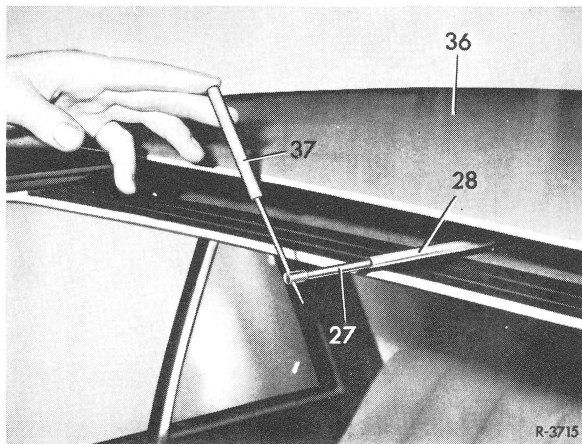


Fig. 1 (shown on Model 114/115)
 27 Teleflex cable control 36 Roof panelling
 28 Teleflex tube 37 Mandrel

In such a case, the gear unit of the electric drive must be disassembled (77.0-300).

If upon disassembly of the gear unit the teleflex control can still not be removed, it is stuck in teleflex tube (28), which should then also be removed (77.0-250).

Installation

- 3 Grease coil at end of new teleflex control (27) well with acid-free grease and introduce carefully into teleflex tube (28) (Fig. 2).

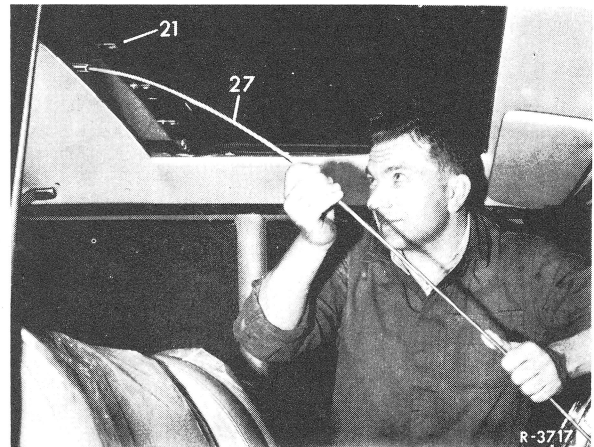


Fig. 2 (shown on Model W 100)
 21 Sliding roof frame
 27 Teleflex cable control

Note: The teleflex cable control should slide in teleflex tube under a force of max. 3 kp. Check by means of spring scale (38) (Fig. 3).

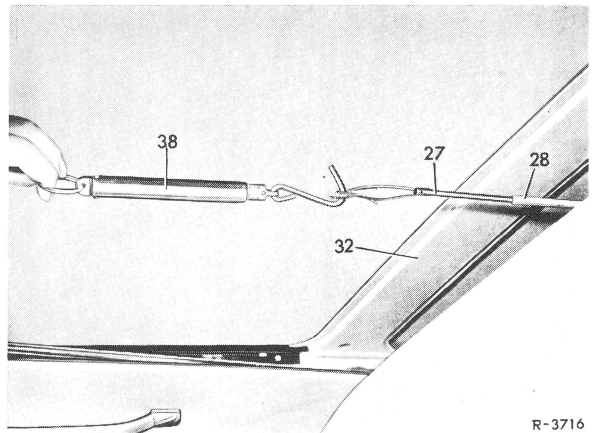


Fig. 3
 27 Teleflex cable control 32 Roof frame
 28 Teleflex tube 38 Spring scale

- 4 Slide teleflex cable control completely into teleflex tube and permit to run into gear unit of electric drive by actuating the sliding roof switch.

- 5 For further installation proceed vice versa.