

## 09—405 Removal and installation of thermostat or temperature regulator for preheating intake air

---

### A. Model 115 (thermostat)

#### Removal

---

- 1 Compress compression spring (5) and push actuating pin (6) away from air valve shaft and out of fastening eye.
- 2 Pull actuating pin (6) with guide sleeve (7) and compression spring (5) out of actuating pin of thermostat.
- 3 Unscrew square nut (8). Remove warm air hose (4) and fresh air duct.
- 4 Remove thermostat from inside out of intake pipe.


#### Attention!

Do not twist or push out plastic fastening nut (9).

#### Installation

---

- 5 Screw thermostat from inside into plastic fastening nut (9) until thermostat projects **7–8 mm** out of plastic fastening nut. Lock thermostat in position by counterlocking square nut (8).
- 6 Install actuating pin (6) with guide sleeve (7) and compression spring (5).

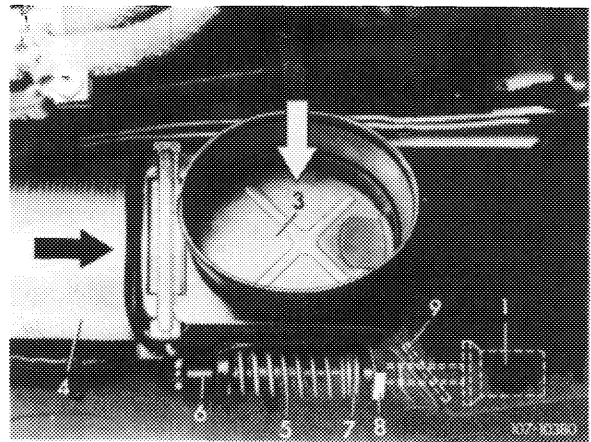


### B. Model 123 (temperature regulator)

#### Removal

---

- 1 Pull vacuum lines from temperature regulator.
- 2 Remove air cleaner.
- 3 Slightly open clips of holder with screwdriver (arrow) and remove temperature regulator through air outlet funnel.

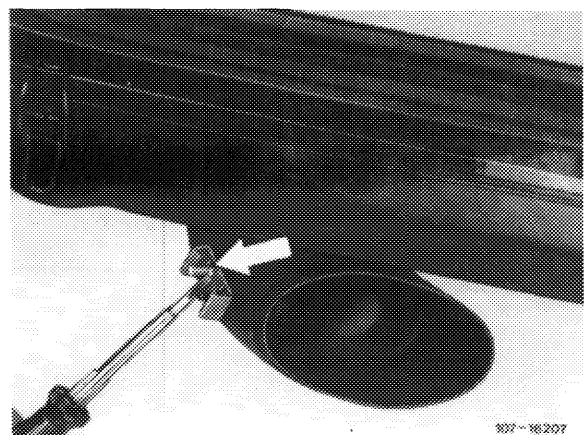

## **Installation**

---

4 For installation proceed vice versa, while paying attention to layout of vacuum lines.