

COMPONENT LOCATIONS

AIR CONDITIONING/HEATER/AUXILIARY FAN

		Page-Figure
Compressor Clutch.....	Lower LH front of engine	207-3
Compressor Low Pressure Cut-Out Switch	On receiver drier.....	201-1
A/C Relay	Top of LH front wheel well, in relay box	201-2
A/C Temperature Selector ...	On upper console	
Ambient Temperature Sensor	Above LH side of passenger's footwell	208-1
Auxiliary Fan Motor	Front of radiator	
Auxiliary Fan Relay	Top of LH front wheel well, in relay box	201-2
Blower Motor	Above passenger's footwell.....	208-2
Blower Resistors	Above passenger's footwell, in fresh air duct	
Blower Switch	On upper console	
Fuse Box	LH rear corner of engine compartment.....	100-1
Receiver Drier Temperature Switch.....	On receiver drier, behind RH headlights	201-1
Switch-Over Valve	Above Passenger's footwell next to blower motor	208-3
C134 (4 pins).....	Above LH side of passenger's footwell	208-1
C154 (1 pin).....	Above passenger's footwell	
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

BACKUP LIGHTS/TRANSMISSION KICKDOWN/GLOVE BOX LIGHT

Backup Light Switch	Base of manual transmission shifter	
Fuse Box	LH rear corner of engine compartment	100-1
Kickdown Solenoid	RH front of transmission	206-2
Kickdown Switch	Under accelerator pedal	
Starter Lockout/Backup Light Switch.....	LH side of automatic transmission	208-4
C104 (14 pins)	To right of parking brake support	205-2
C146 (4 pins).....	Beside upper console, above accelerator	208-5
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

CENTER CONSOLE ILLUMINATION

Blower Switch	On upper console	
Fiber Optic Light Sources	Behind upper console	
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Switch.....	On center console	
Light Switch.....	Instrument panel, left of steering column	
C124.....	Behind center console	
G102	Behind instrument cluster	202-1

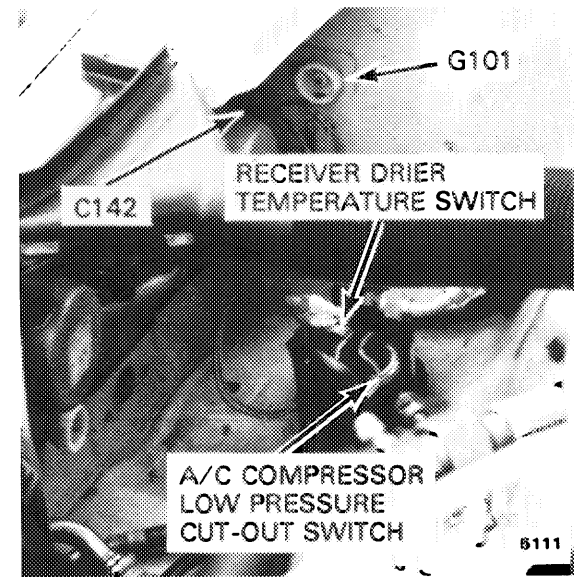


Figure 1 - Behind RH Headlight Assembly

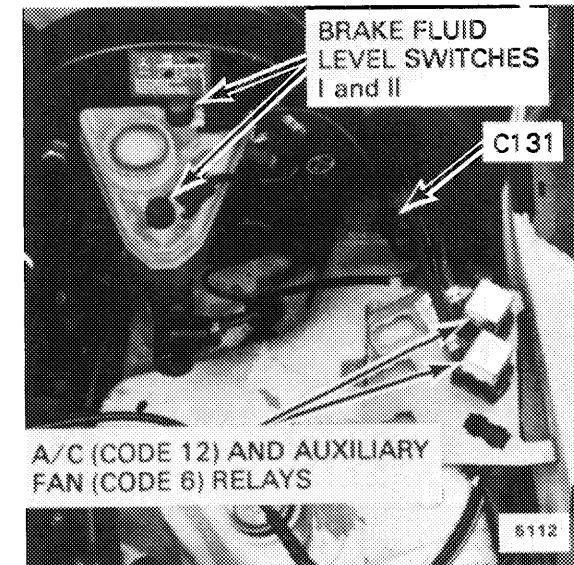


Figure 2 - Top Of LH Front Wheel Well

COMPONENT LOCATIONS

CHARGING SYSTEM

		Page-Figure
Alternator	Front of engine	
Battery	RH rear of engine compartment	206-1
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
Warning Module	Right of parking brake support	205-2
G100	RH front fender, ahead of battery	206-1

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay	Behind LH rear wheel well	202-2
Antenna Switch	On upper console	
Fuse Box	LH rear corner of engine compartment	100-1
In-Line Radio Fuse	In upper console behind radio	
C135 (6 pins)	Behind LH rear wheel well near antenna motor/relay	
C148 (2 pins)	Behind rear of ash tray	
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2

COURTESY LIGHTS

Door Switches	In each door jamb	
Front Dome Light and Switch	Above rear view mirror assembly	
Rear Dome Light Switch	On upper console	
Warning Module	To right of parking brake support	205-2
G102	Behind instrument cluster	202-1

EXHAUST GAS RECIRCULATION

EGR Control Unit	Above RH side of passenger's footwell	208-2
EGR Switchover Valve	RH front fender behind headlights	208-6
EGR Valve	RH side of engine in exhaust manifold	209-5
Fuse Box	LH rear corner of engine compartment	100-1
Mechanical Switchover Valve	Top rear of valve cover	209-1
TDC Transmitter	Front of cylinder block	209-2
Thermo -Vacuum Valve	RH front side of cylinder block	209-3
Vacuum Control Valve	Top rear of fuel injection pump	209-1
Vehicle Speed Sensor	Mounted on rear of speedometer	208-5
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

Page-Figure

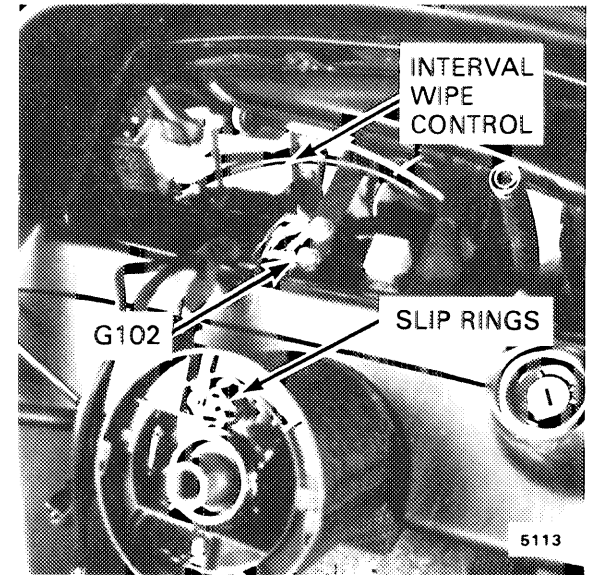


Figure 1 - Behind Instrument Cluster

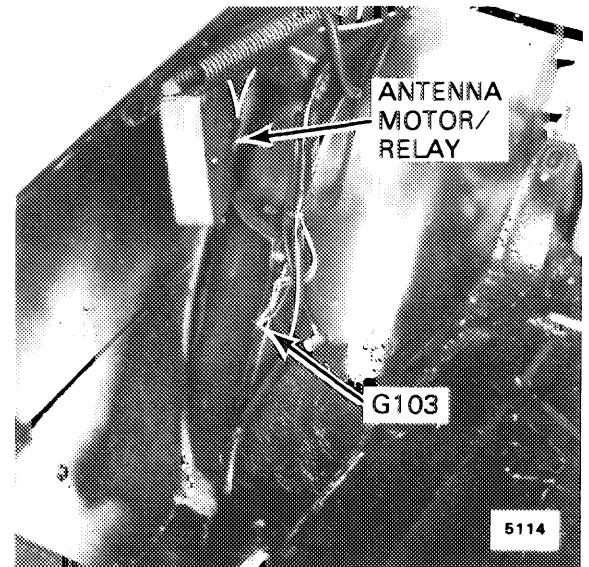


Figure 2 - Behind LH Rear Wheel Well

COMPONENT LOCATIONS

HEADLIGHTS/FOG LIGHTS

		Page-Figure
Combination Switch	Upper LH side of steering column	203-2
Light Switch	Instrument panel, left of steering column	
C106 (14 pins)	To left of brake pedal support	205-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

HEATED SEATS

Fuse Box	LH rear corner of engine compartment	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	In center console	
G102	Behind instrument cluster	202-1

HORNS/SLIDING ROOF

Fuse Box	LH rear corner of engine compartment	100-1
Horn Switch	In steering wheel	
Sliding Roof Motor	In trunk, above LH wheel well	
Sliding Roof Switch	On upper console	
Slip Rings	Behind center of steering wheel	203-2
C106 (14 pins)	To left of brake pedal support	205-2
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1

LIGHTS: MARKER/LICENSE/TRUNK

Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of parking brake support	205-2
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

LIGHTS: PARK/TAIL

Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of parking brake support	205-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

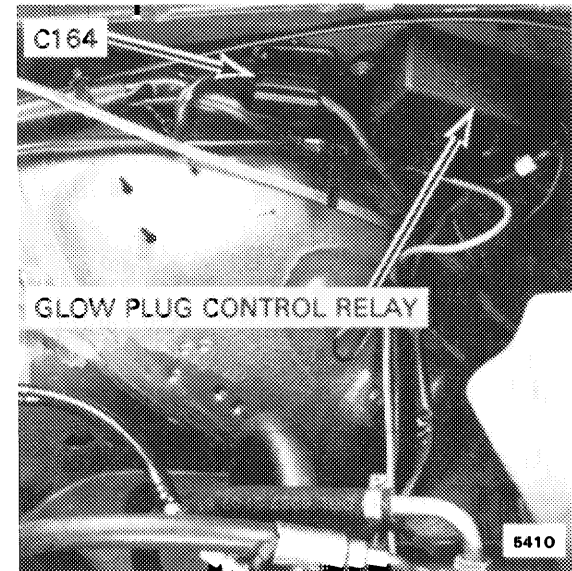


Figure 1 - LH Front Wheel Well

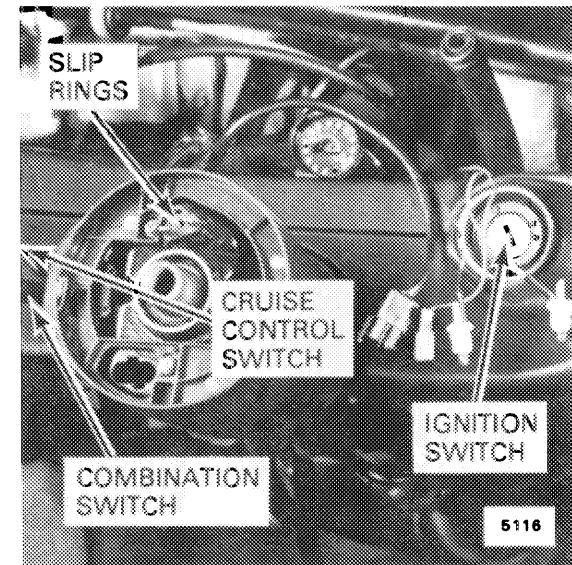


Figure 2 - Top of Steering Column

COMPONENT LOCATIONS

POWER DISTRIBUTION

		Page-Figure
Fuse Box	LH rear corner of engine compartment	100-1
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
C104 (14 pins)	To right of parking brake support	205-2
G100	RH front fender, ahead of battery	206-1

POWER WINDOWS

Console Switch Group	On center console	
Fuse Box	LH rear corner of engine compartment	100-1
Rear Window Switches	Below each rear window	
Window Motors	Below each window	207-2
Window Relay	Behind instrument cluster	204-2
C107 (6 pins).....	Under console	
C108 (2 pins).....	Under console	
G102	Behind instrument cluster	202-1

PRE-GLOW SYSTEM

Fuse Box	LH rear corner of engine compartment	100-1
Glow Plug Control Relay	Behind LH headlights	203-1
Ignition Switch	Instrument panel, right of steering column	205-1
Starter Assembly	Lower RH side of engine	
Starter Lockout/Backup		
Light Switch.....	LH side of automatic transmission	208-4
Washer Motor	Bottom of washer fluid reservoir, behind LH headlights	
C141 (4 pins).....	Behind LH headlight assembly	
C146 (4 pins).....	Beside upper console, above accelerator	208-5
G100	RH front fender, ahead of battery	206-1
G102	Behind instrument cluster	202-1

REAR DEFOGGER

Fuse Box	LH rear corner of engine compartment	100-1
Rear Defogger Switch	On upper console	
Rear Defogger Timer Relay ..	Behind LH side of instrument cluster	204-2
C104 (14 pins)	To right of parking brake support	205-2
G102	Behind instrument cluster	202-1
G104	Ahead of RH rear light assembly	204-1



Figure 1 - Ahead of RH Rear Lights

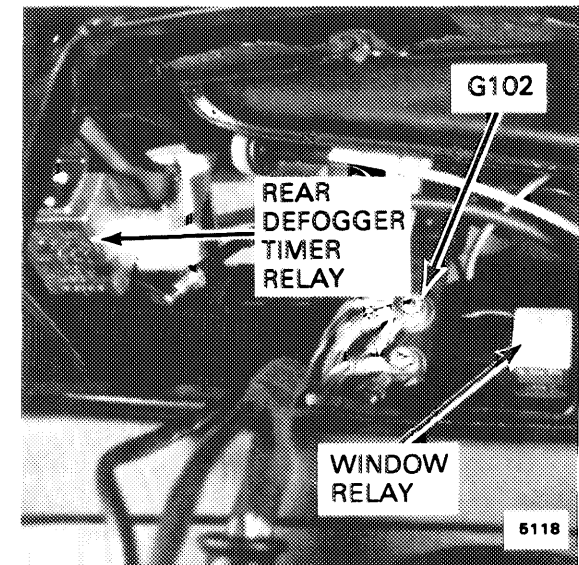


Figure 2 - Behind Instrument Cluster

COMPONENT LOCATIONS

START/STOP (IGNITION SWITCH)

		Page-Figure
Fuel Shutoff Diaphragm	Rear of fuel injection pump	207-4
Ignition Switch	Instrument panel, right of steering column	205-1
Light Switch	Instrument panel, left of steering column	
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of automatic transmission	208-4
C146 (4 pins)	Beside upper console, above accelerator	208-5
G100	RH front fender, ahead of battery	206-1

STOPLIGHTS/CRUISE CONTROL

Brake Switch	Top of brake pedal support	205-2
Clutch Switch	On clutch pedal support	
Cruise Control Actuator	Left front of engine	207-6
Cruise Control Amplifier	On LH undercover of I/P	209-4
Cruise Control Switch	Upper LH side of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Vehicle Speed Sensor	Mounted on rear of speedometer	207-5
C104 (14 pins)	To right of parking brake support	205-2
C113 (2 pins)	Above clutch pedal	
C114 (2 pins)	Above clutch pedal	
C140 (6 pins)	On LH undercover of I/P	209-4
C164	LH front fender behind headlight	203-1
C165	Under LH side of I/P near brake pedal support	
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Hazard Switch	Center console	
Flasher	In center console forward of shift lever	
C104 (14 pins)	To right of parking brake support	205-2
C106 (14 pins)	To left of brake pedal support	205-2
C141 (4 pins)	Behind LH headlight assembly	
C142 (4 pins)	Behind RH headlight assembly	201-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2
G104	Ahead of RH rear light assembly	204-1

Page-Figure

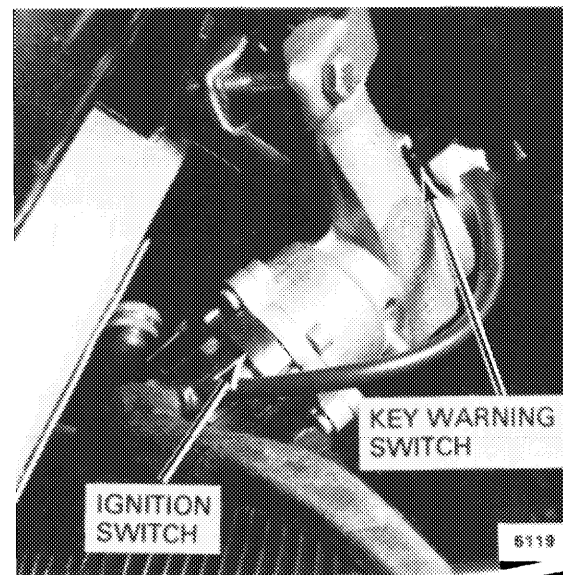


Figure 1 - Ignition Switch (As Seen From Below)

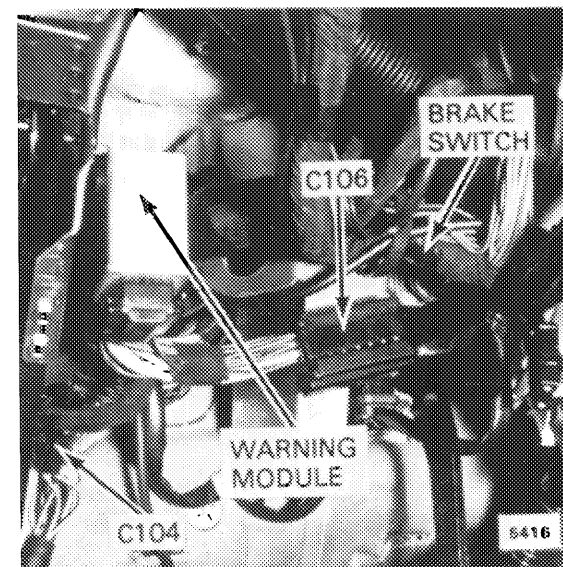


Figure 2 - To Left of Steering Column

COMPONENT LOCATIONS

Page-Figure

CLUSTER ILLUMINATION

Brake Wear Sensors	In each front brake pad	
Coolant Temperature Sender	Left center of engine cylinder head	207-4
Fuel Gauge Sender	Under first aid kit tray	
Fuse Box	LH rear corner of engine compartment	100-1
Light Switch	Instrument panel, left of steering column	
C104 (14 pins)	To right of parking brake support	205-2
C131 (2 pins)	Beside power brake master cylinder	201-2
C132 (2 pins)	Between battery and RH front wheel well	206-1
G101	RH front fender, behind headlights	201-1
G102	Behind instrument cluster	202-1
G103	In trunk, on rear of LH wheel well	202-2

WARNING INDICATORS/GAUGES/CLOCK/INSTRUMENT

Brake Fluid Level		
Switches	Brake fluid reservoir	201-2
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	LH rear corner of engine compartment	100-1
Key Warning Switch	Part of ignition switch	205-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	205-2
C104 (14 pins)	To right of parking brake support	205-2
C131 (2 pins)	Beside power brake master cylinder	201-2
C166 (2 pins)	Under driver's seat	
G102	Behind instrument cluster	202-1

WIPER/WASHER

Combination Switch	Upper LH side of steering column	203-2
Fuse Box	LH rear corner of engine compartment	100-1
Interval Wipe Control	Behind LH side of instrument cluster	202-1
Washer Motor	Bottom of washer fluid reservoir, behind LH headlights	
Wiper Motor	In center of fresh air duct	
C106 (14 pins)	To left of brake pedal support	205-2
C112 (6 pins)	To upper right of power brake booster	207-1
C141 (4 pins)	Behind LH headlight assembly	
G102	Behind instrument cluster	202-1

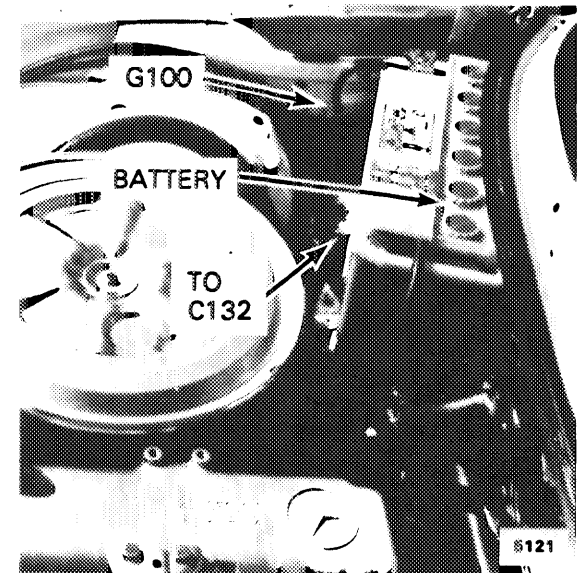


Figure 1 - Ahead of Battery

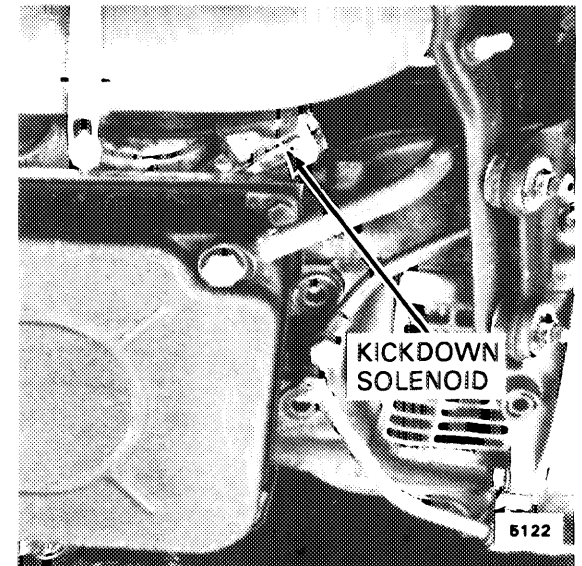


Figure 2 - RH Side of Automatic Transmission

COMPONENT LOCATIONS

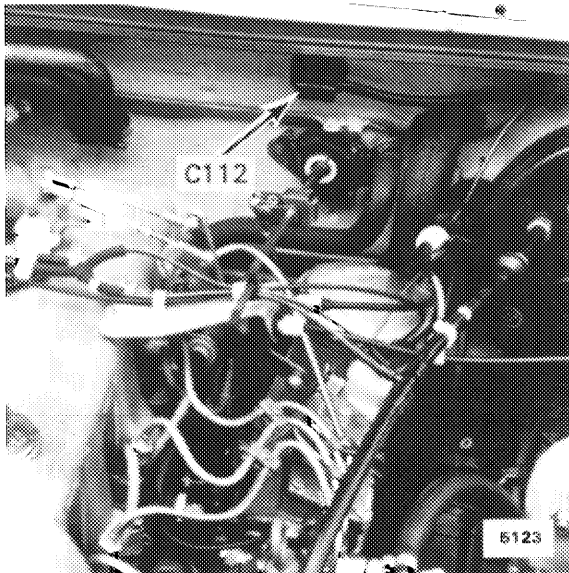


Figure 1 - To Right Of Power Brake Booster

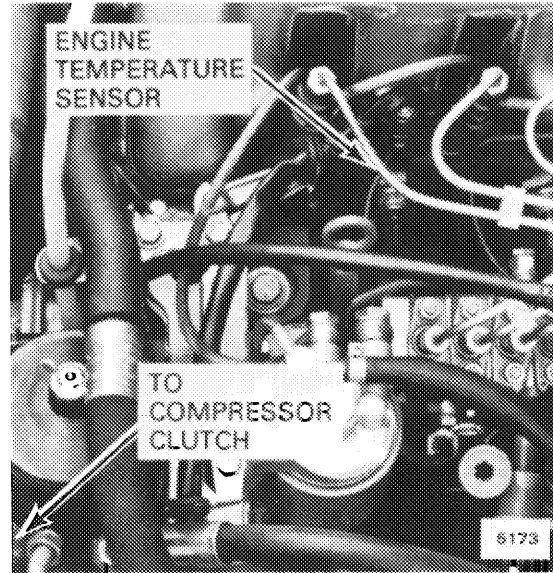


Figure 3 - Front LH Side Of Engine

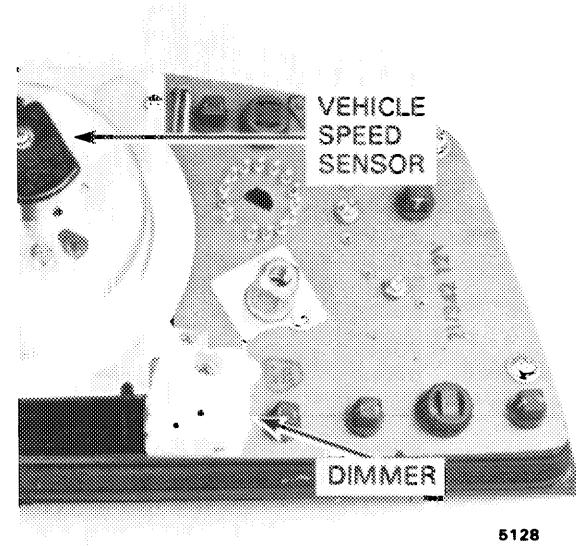


Figure 5 - Back Of Instrument Cluster

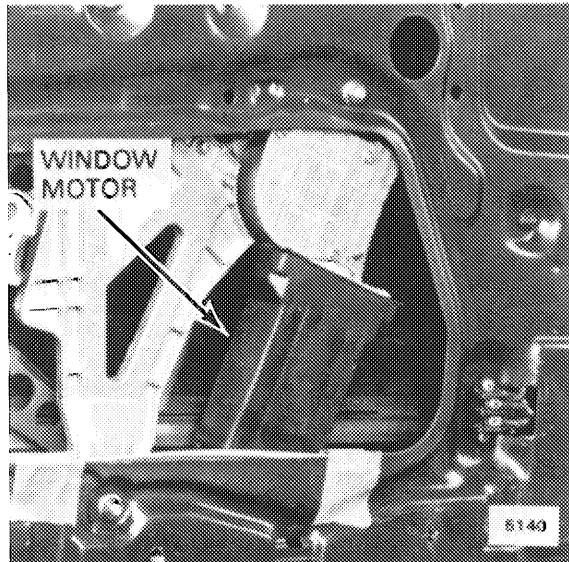


Figure 2 - Driver's Door

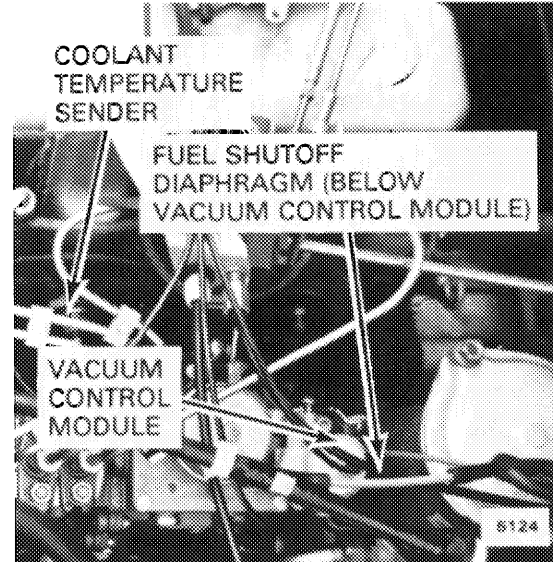


Figure 4 - Rear RH Side Of Engine

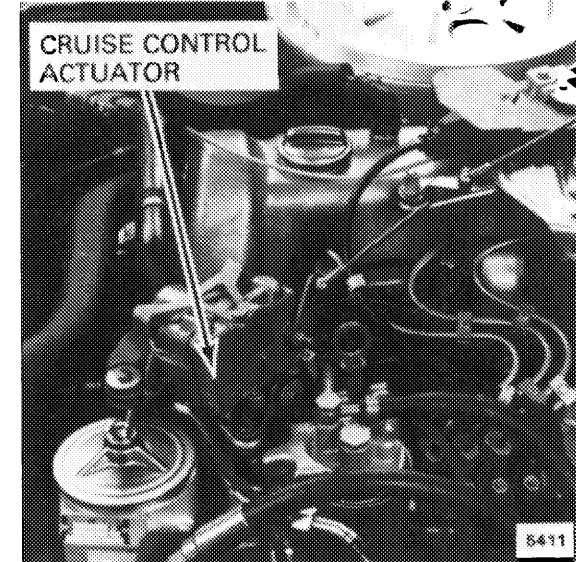


Figure 6 - LH Side Of Engine

COMPONENT LOCATIONS

208
240
0

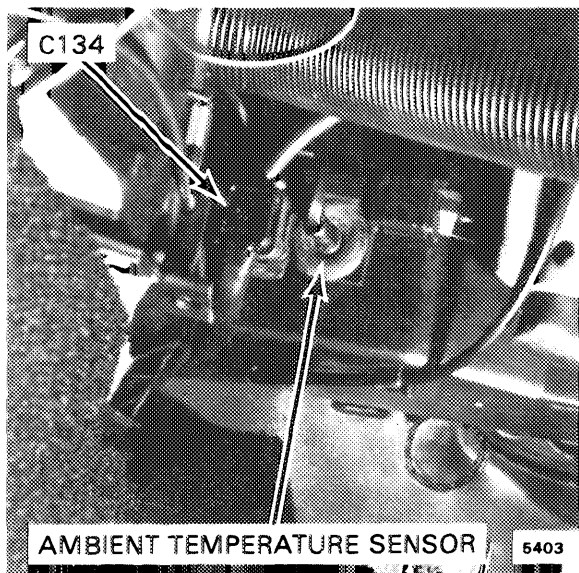


Figure 1 - Under RH Side Of Instrument Panel

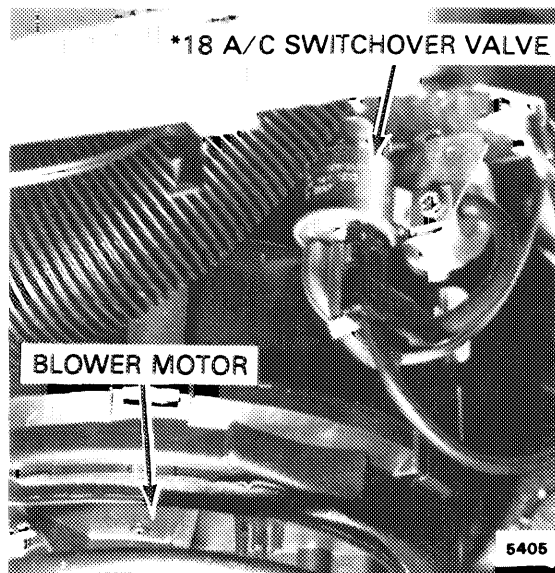


Figure 3 - Above RH Side Of Passenger's Footwell

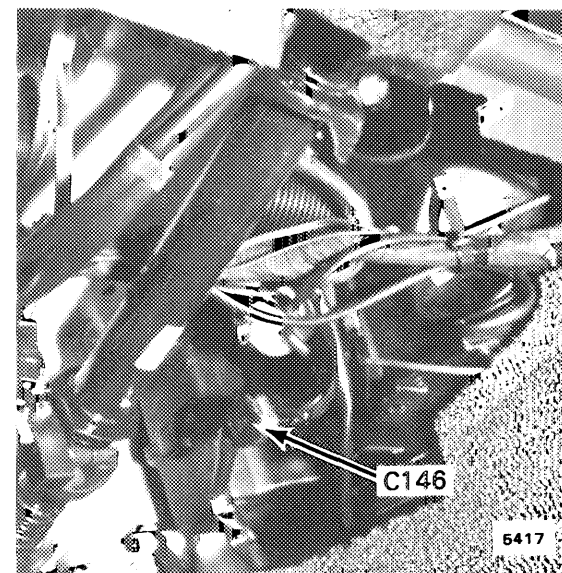


Figure 5 - To Right Of Steering Column

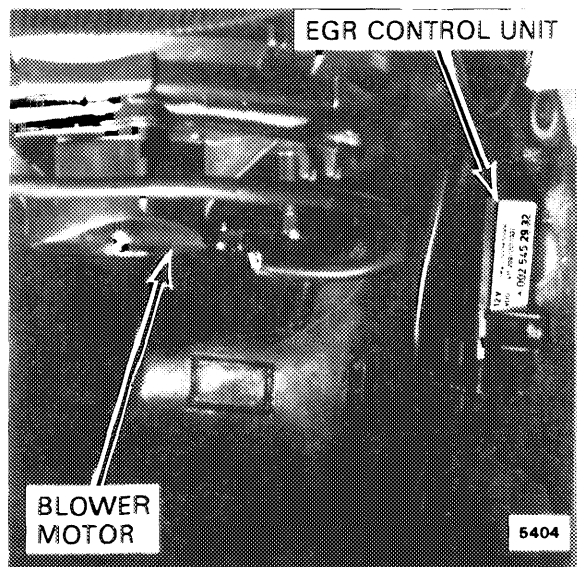


Figure 2 - Above RH Side Of Passenger's Footwell

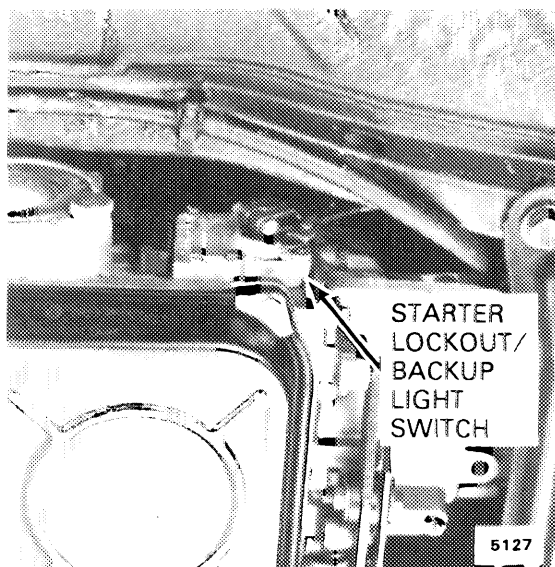


Figure 4 - LH Side Of Automatic Transmission

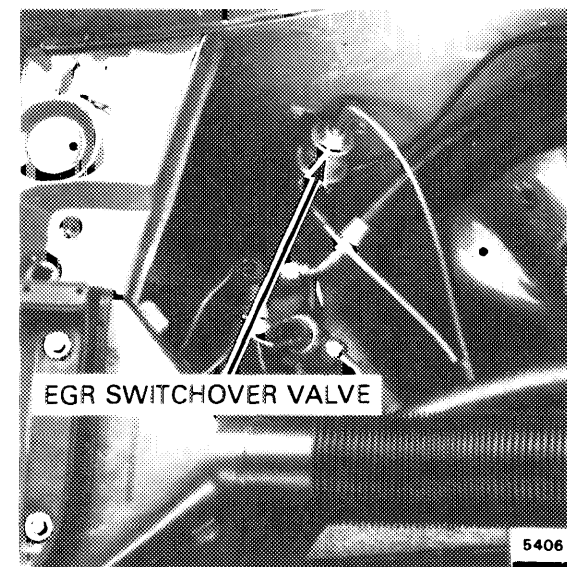


Figure 6 - Behind RH Headlight Assembly

COMPONENT LOCATIONS

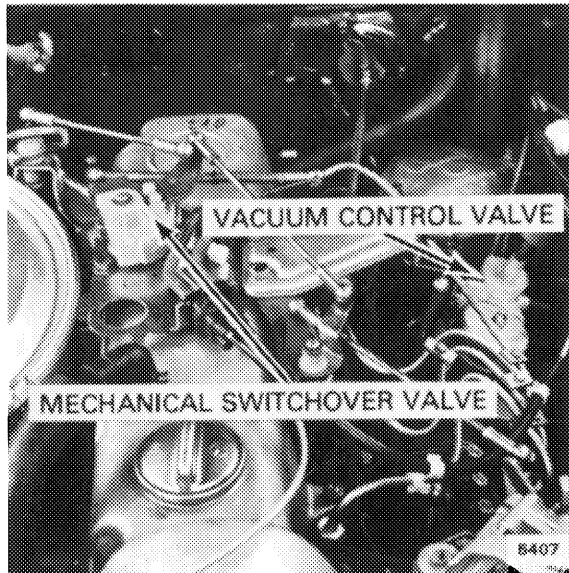


Figure 1 - LH Side Of Engine

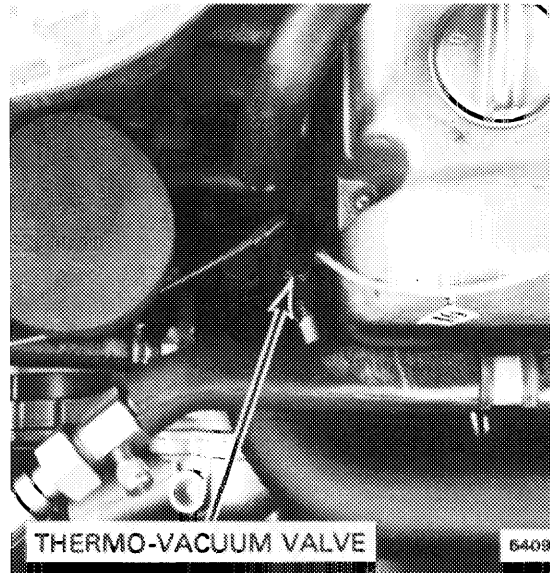


Figure 3 - Top RH Front Of Engine

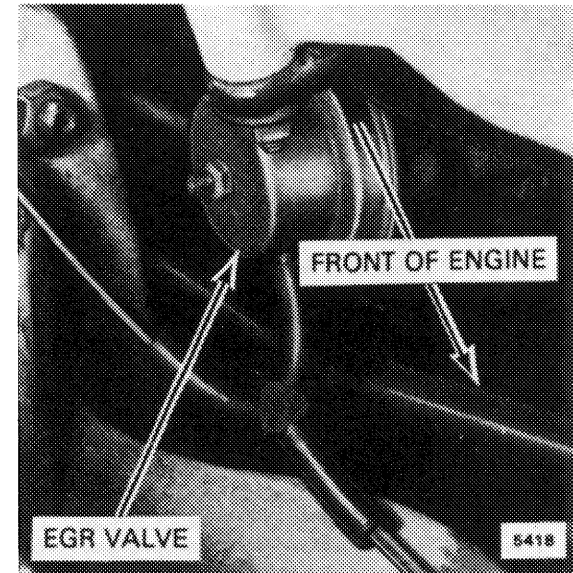


Figure 5 - RH Side Of Engine At Manifold



Figure 2 - Front Of Engine


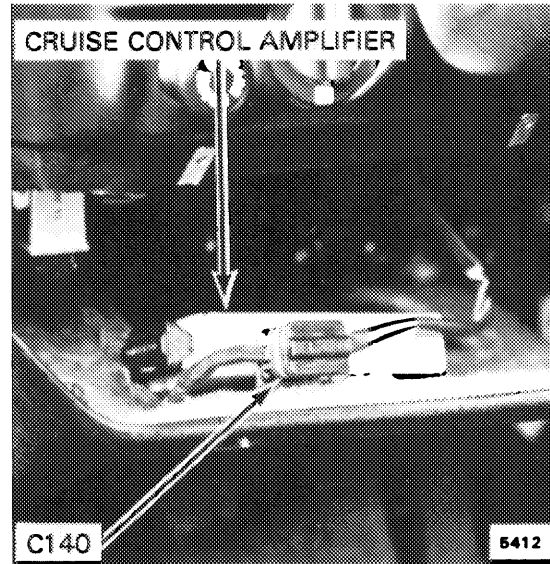


Figure 4 - LH Undercover Of Instrument Panel

PUSHBUTTON CONTROL ASSEMBLY

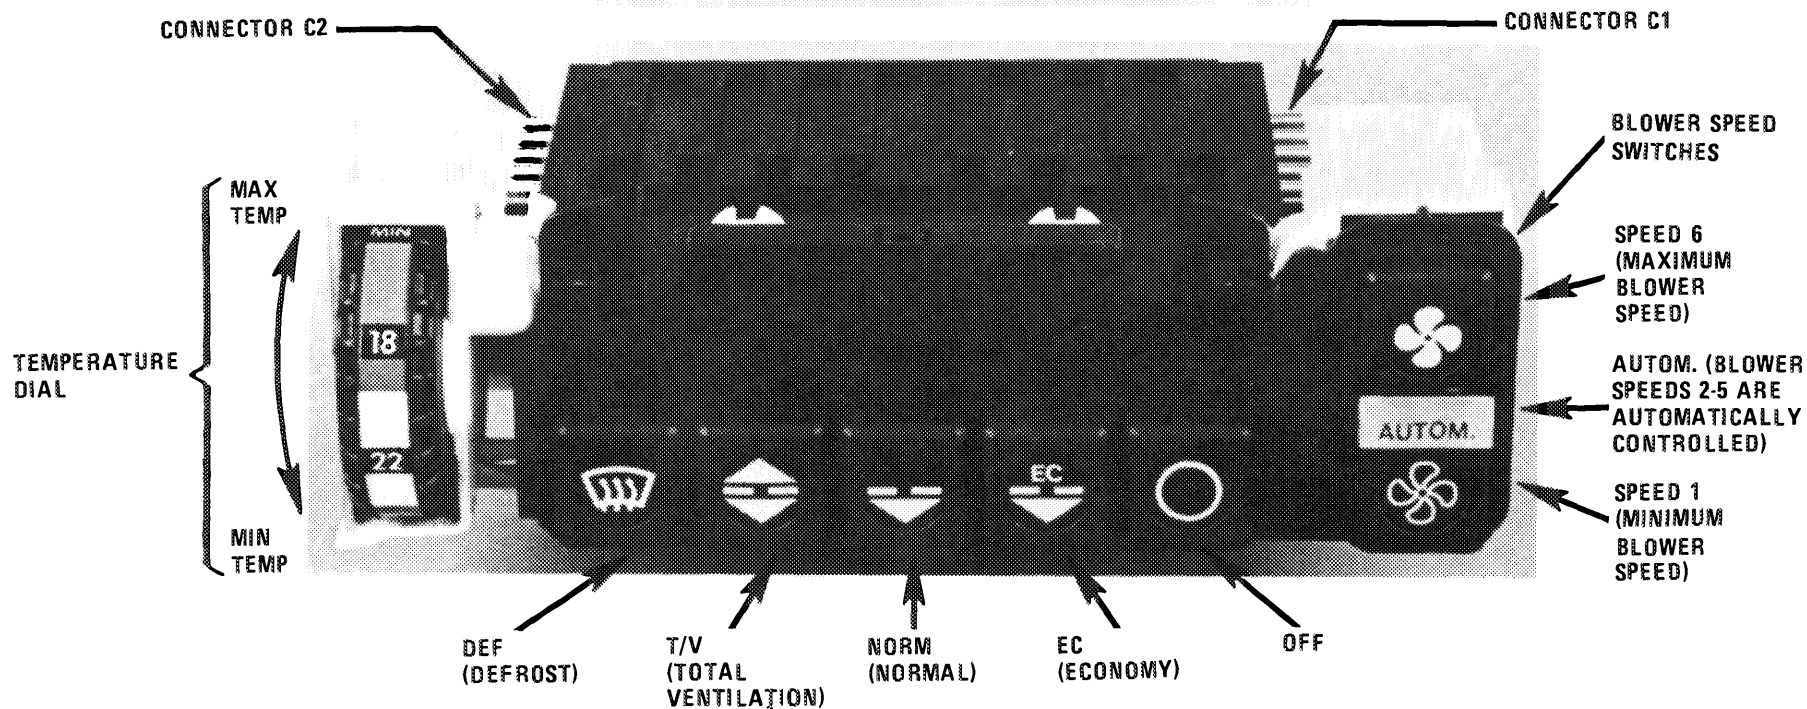

FUNCTION CONTROL SWITCHES

NOTE: ONLY ONE FUNCTION IS TO BE SELECTED AT ANY TIME.

INDEX

300 D/CD/TD (TURBO)

ACC Grounds Distribution	308
ACC Power Distribution	308
Air Delivery (Electrical)	302
Air Delivery (Vacuum)	304
Component Location Table	310
Component Mode Table	309
Compressor Clutch Control	307
Pushbutton Control Assembly	300
Temperature Control	306

380 SL

ACC Grounds Distribution	332
ACC Power Distribution	332
Air Delivery (Electrical)	326
Air Delivery (Vacuum)	328
Component Location Table	334
Component Mode Table	333
Compressor Clutch Control	331
Pushbutton Control Assembly	300
Temperature Control	330

300 SD (TURBO)

ACC Grounds Distribution	321
ACC Power Distribution	321
Air Delivery (Electrical)	314
Air Delivery (Vacuum)	316
Component Location Table	323
Component Mode Table	322
Compressor Clutch Control	319
Pushbutton Control Assembly	300
Temperature Control	320


380 SEL/SEC

ACC Grounds Distribution	321
ACC Power Distribution	321
Air Delivery (Electrical)	314
Air Delivery (Vacuum)	316
Component Location Table	323
Component Mode Table	322
Compressor Clutch Control	318
Pushbutton Control Assembly	300
Temperature Control	320

AIR DELIVERY (ELECTRICAL)

(For Component Locations See Page 310)

300 D/CD/TD

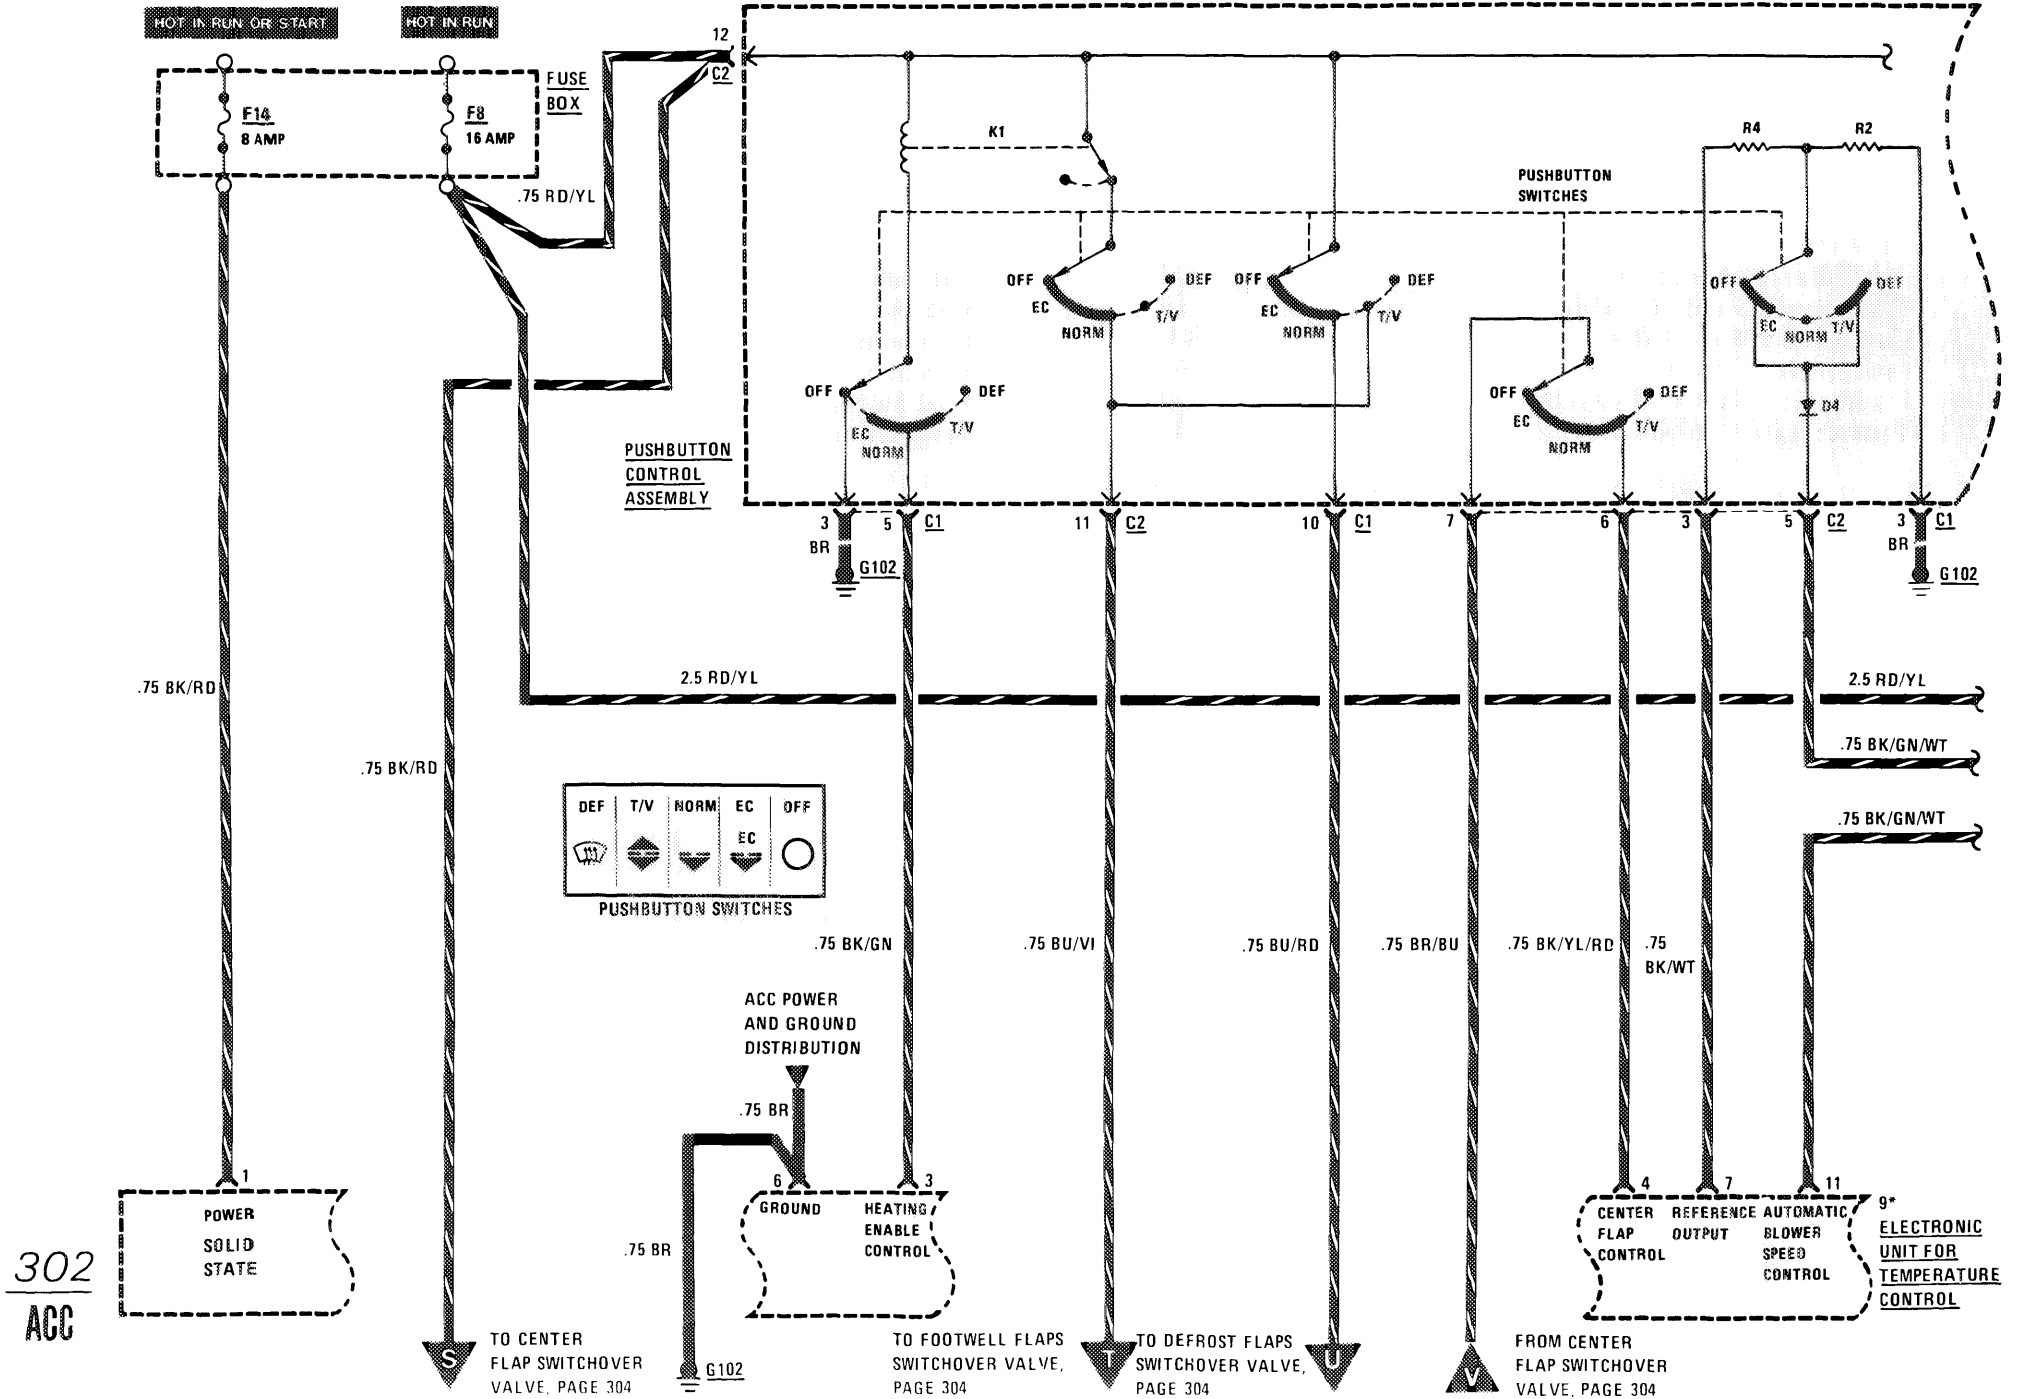


302
ACC


AIR DELIVERY (ELECTRICAL)

(For Component Locations See Page 310)

300 D/CD/TD

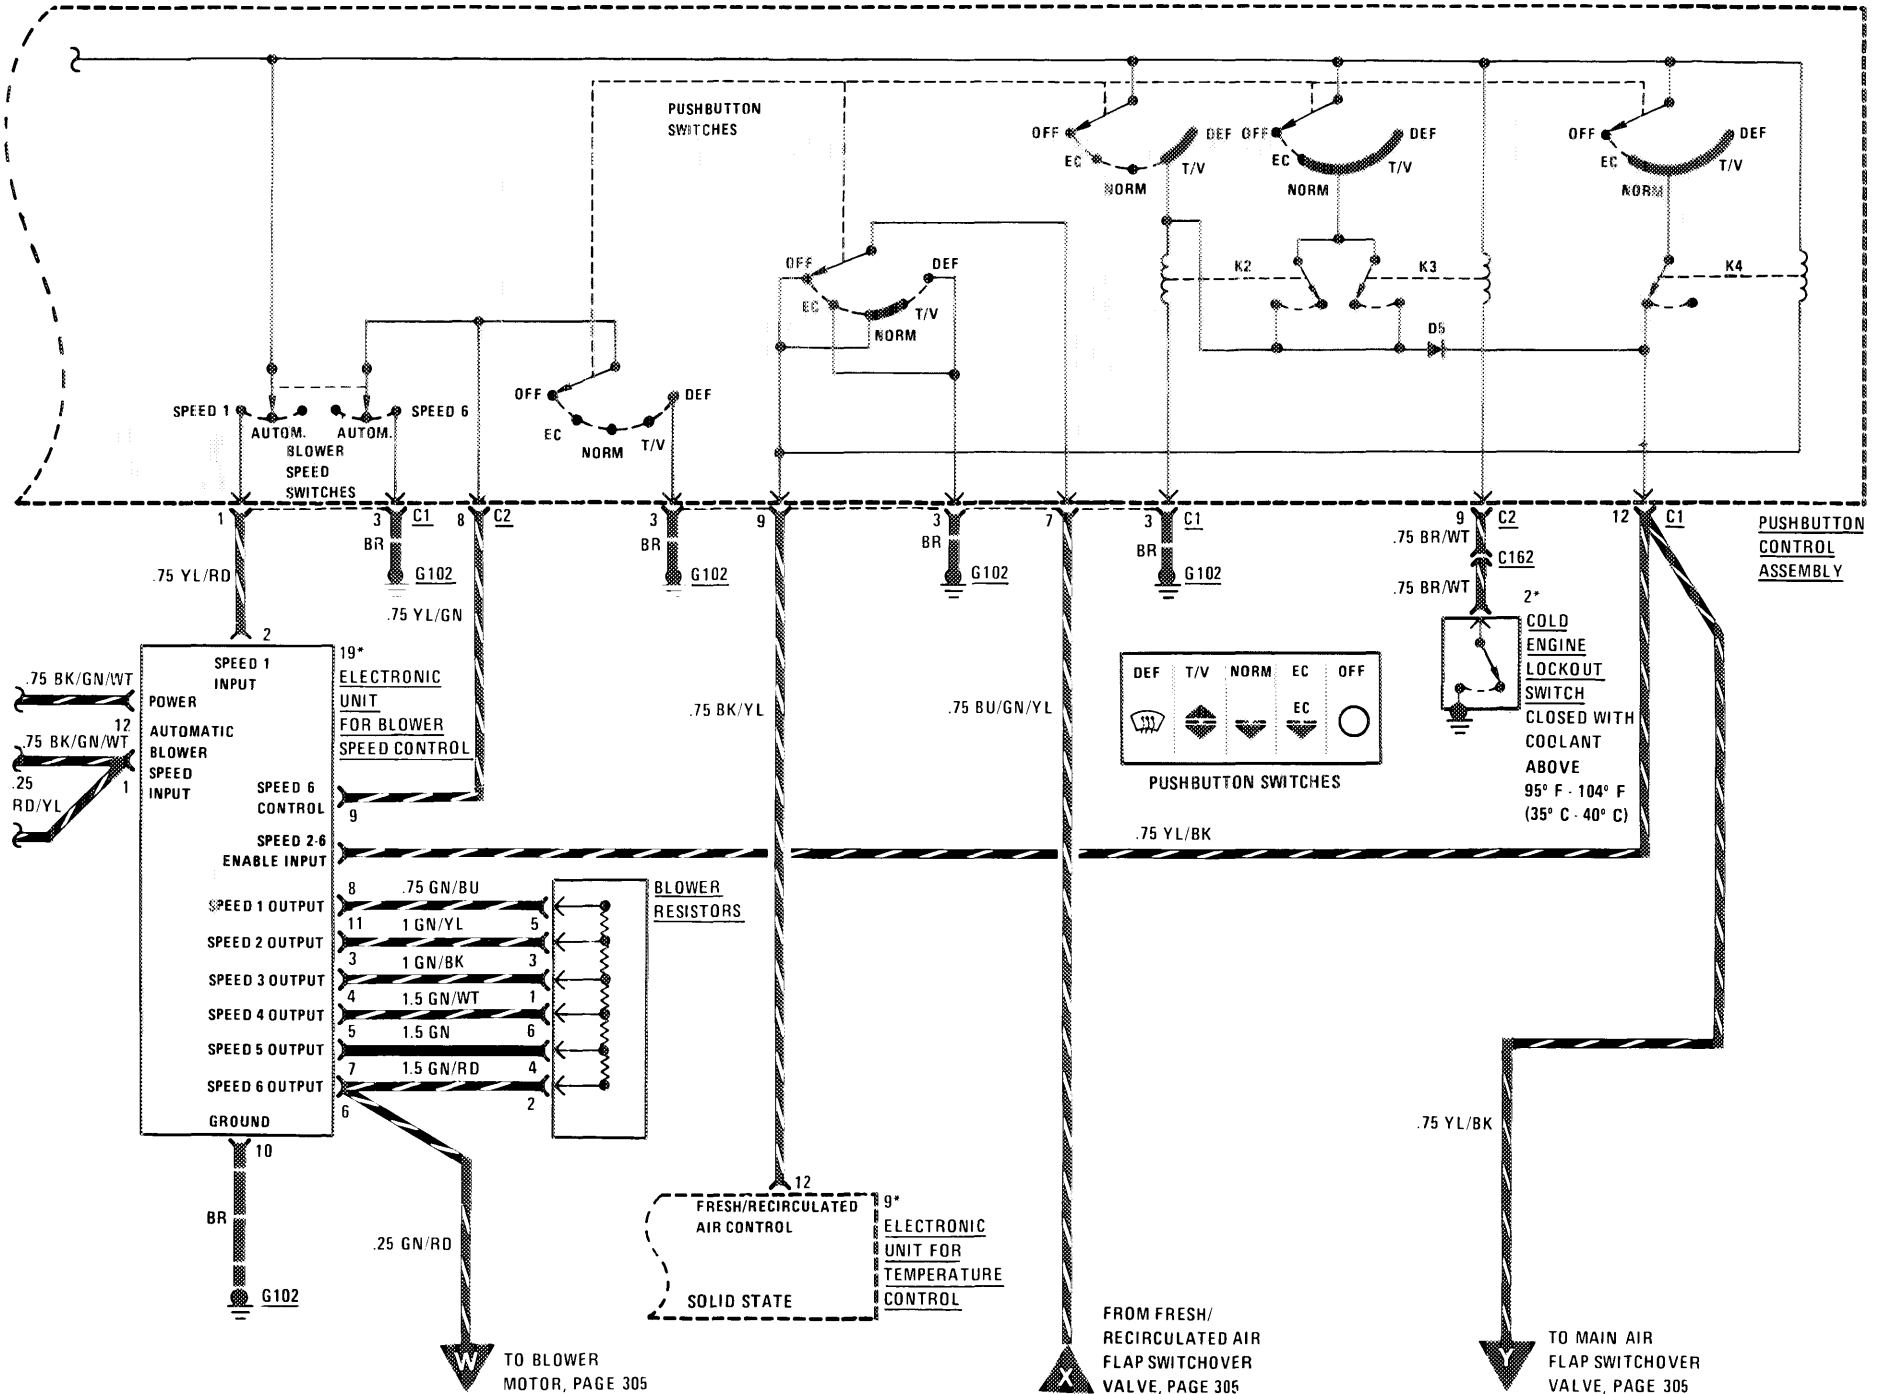

AIR DELIVERY (VACUUM)
(For Component Locations See Page 310)

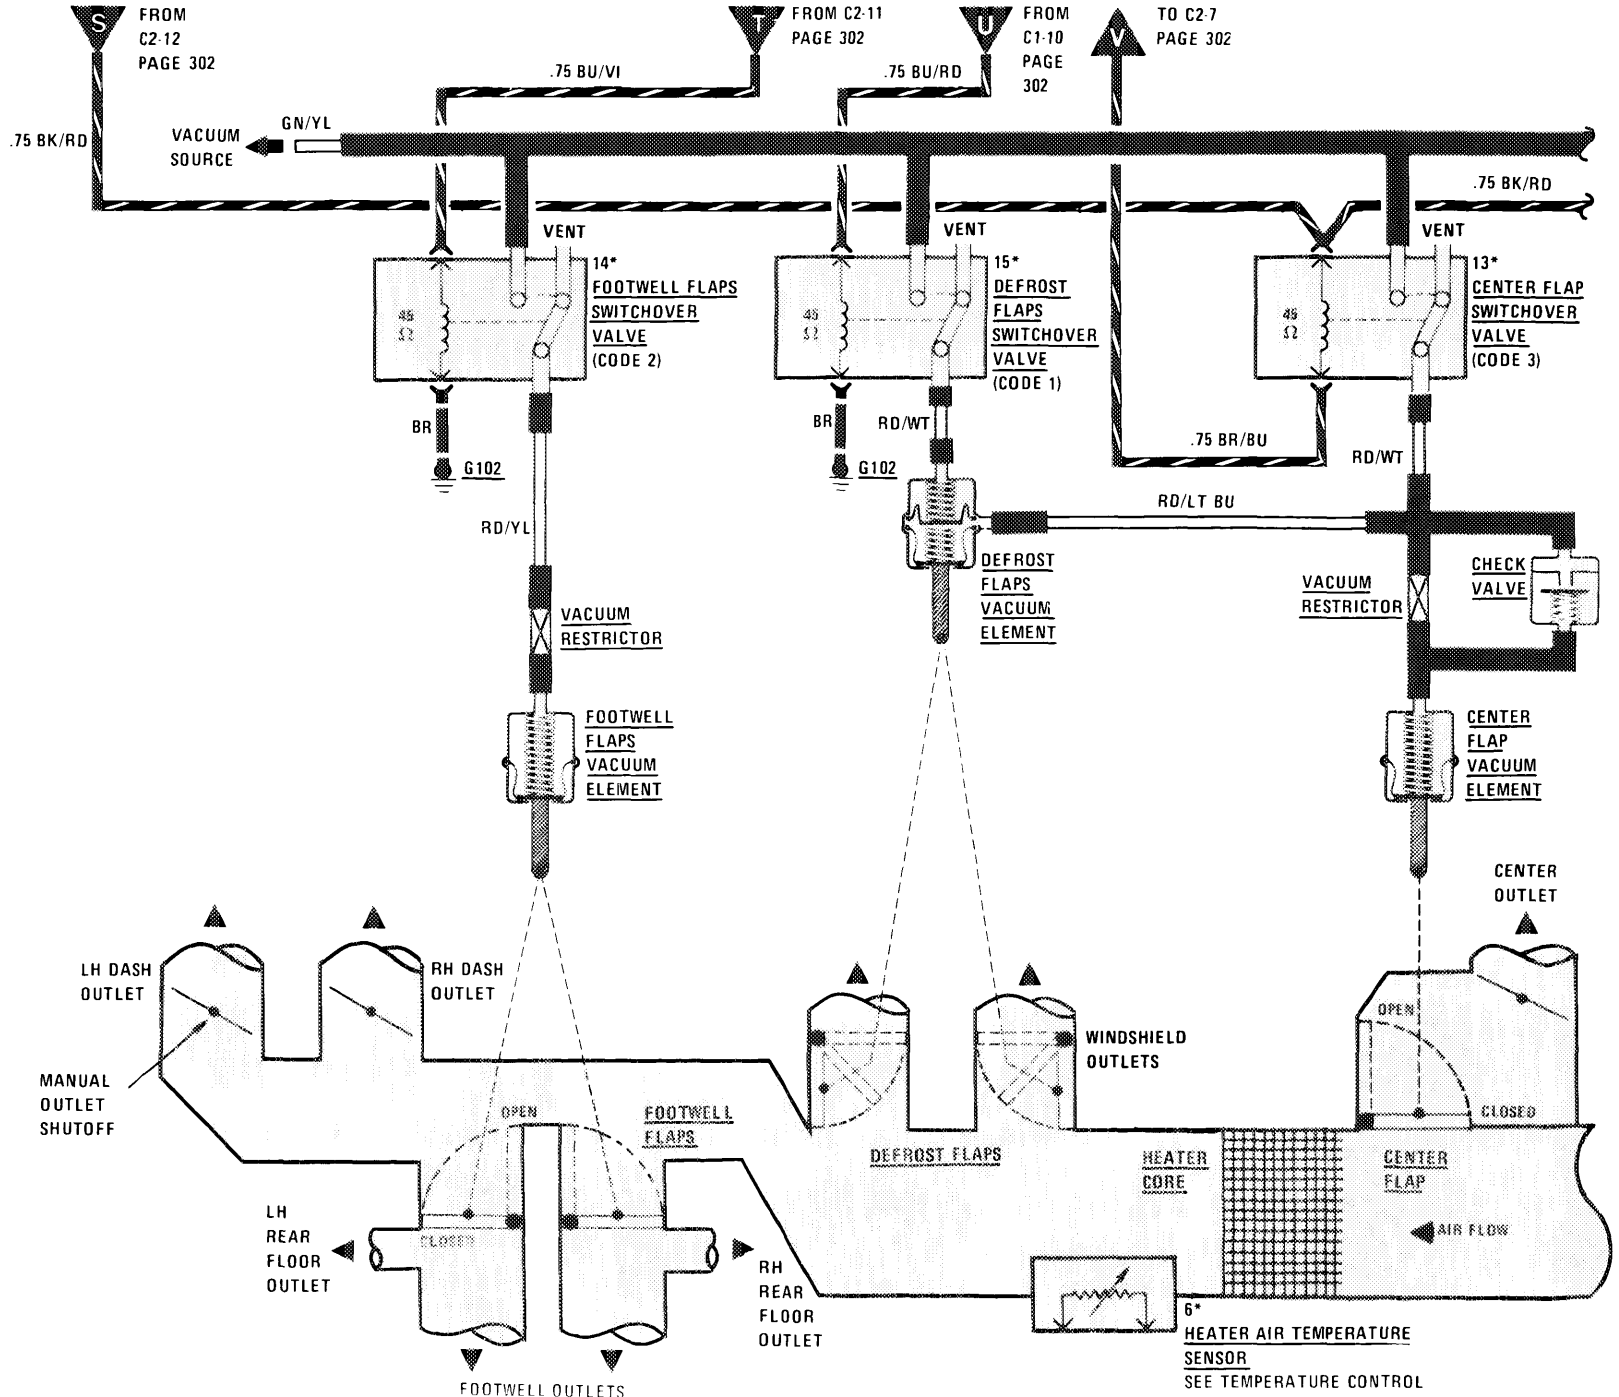

AIR DELIVERY (VACUUM)

(For Component Locations See Page 310)

300 D/CD/TD

