



Self-made tools

Pressing-off disc for impeller

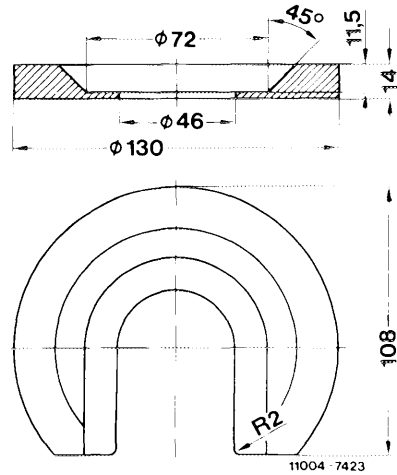


Pressing-in sleeve

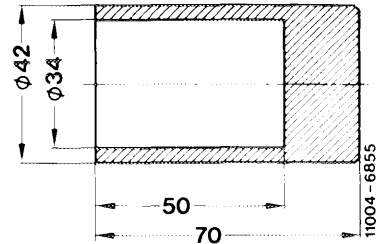

- 1 Fan hub
- 2 Water pump shaft with compact bearing
- 3 Bearing housing


- 5 Sliding ring seal
- 6 Counter-ring
- 7 O-ring
- 8 Impeller

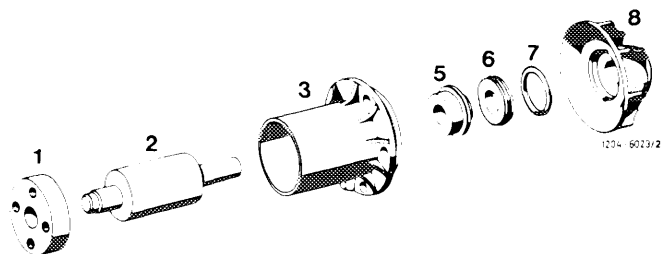


## Disassembly

---


1 Press-off impeller. For this purpose, place pressing-off disc between impeller and bearing housing.

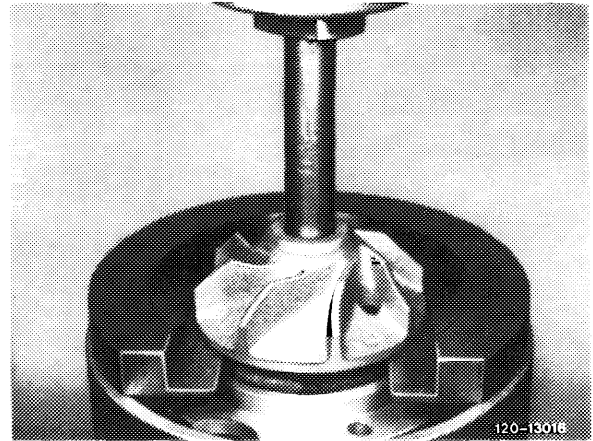

2 Apply light hammer blows at several points between bearing housing and sliding ring seal to cancel the pre-load and force sliding ring seal out.

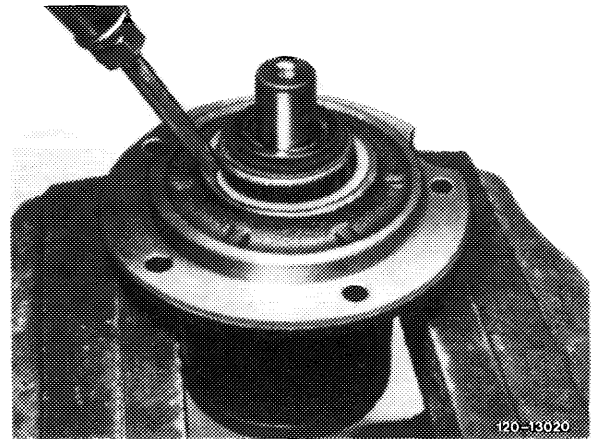

3 Force counter-ring out of impeller.

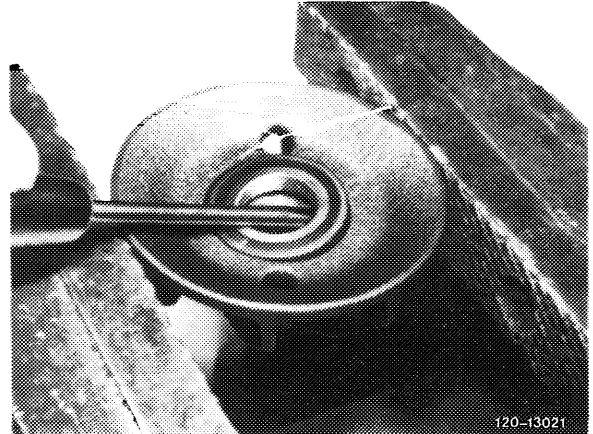

## Assembly


---

4 Slightly coat mounting bore of sliding ring seal in water pump housing with sealing compound.

Press-in sliding ring seal by means of pressing-in sleeve or knock out.

### **Attention !**

Support at bearing housing only and not at water pump shaft.

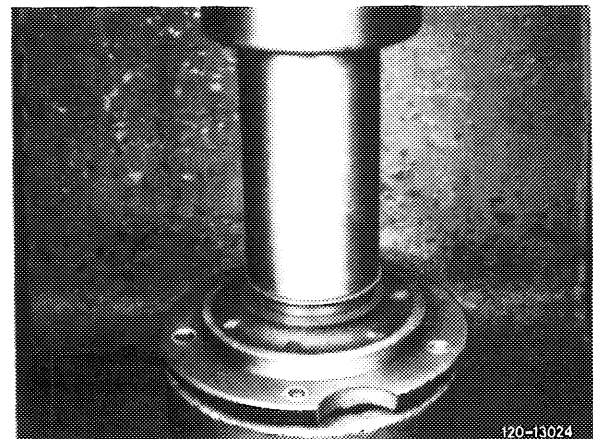

5 Coat O-ring on counter-ring with brake cylinder paste and push with chamfered side (arrow) into thoroughly cleaned impeller.




120 - 10863

6 Clean sealing surfaces of counter-ring and sliding ring seal free of dust with chamois cloth.

7 Degrease shaft stud and impeller in bore.

8 Press-on impeller flush with shaft while supporting water pump shaft.

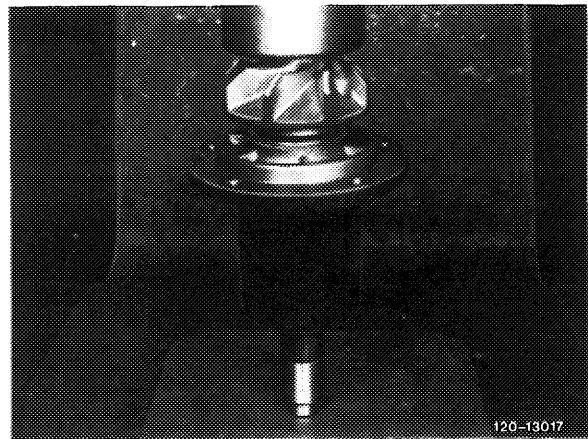

120-13017