

### Adjustment

---

- 1 Set ignition lock to zero position so that engine is not starting.
- 2 Set preglow starting switch into driving position.
- 3 Remove washer (5) by pulling out cotter pin.

- |                   |             |
|-------------------|-------------|
| 1 Adjusting lever | 4 Wire coil |
| 2 Oblong eye      | 5 Washer    |
| 3 Fastening screw |             |

- 4 Loosen fastening screw (3) and adjust wire coil (4) with oblong eye (2) in such a manner that at least 2 mm play is available between center of axis and oblong eye (distance "a").

- 5 Pull preglow starting switch to start and check whether the adjusting lever (1) rests against start position stop when in starting position.

- 6 Run engine up to operating temperature. Turn idle speed adjuster completely counterclockwise and stop engine.

If engine is not stopping correctly, slide wire coil (4) slightly in direction of stop.

