


07.1–235 Removal and installation of fuel pump

Job no. of flat rates or standard texts and flat rates data 07–5710.

Removal

- 1 Unscrew all fuel connections.
- 2 Release two fastening nuts and remove fuel pump.
- 3 Clean fuel pump, exchanging suction and delivery valves or fuel pump.

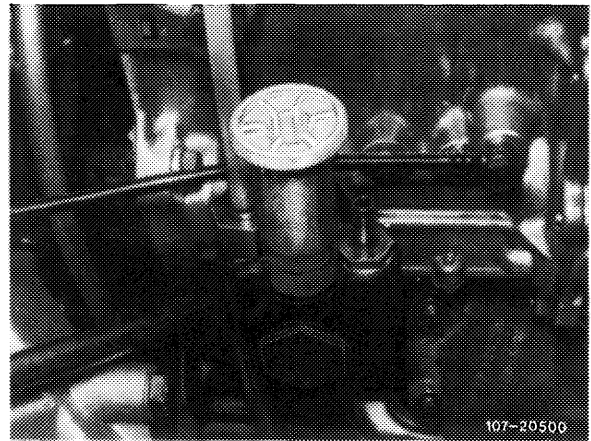

Installation

- 4 Fit fuel pump using new gasket.
- 5 Attach fuel connections and vent injection system (07.1–140).
- 6 Check fuel pump (07.1–145).