

Oil types and capacities

Oil type	Hydraulic	
Approved oil types	refer to „Specifications for Service Products“ page 343	

Total filling capacity of system	approx. 3.5 l	
----------------------------------	---------------	--

Capacity of oil supply tank up to marks on oil dipstick	max.	approx. 1.8 l
	min.	approx. 1.2 l

Special tools


Funnel with filter



111 589 04 63 00

Note: Check fluid level with engine turned off and correct if necessary. With the Level Control System in operating condition and vehicle at curb weight (not loaded), the oil level must be between the „Max.“ and „Min.“ marking. If the vehicle is fully loaded the oil level should be at the „Min.“ marking.

- Remove cap with dipstick on hydraulic oil reservoir. Wipe fluid from dipstick and insert it again. Then read oil level.
- For replenishing fluid use funnel with filter.

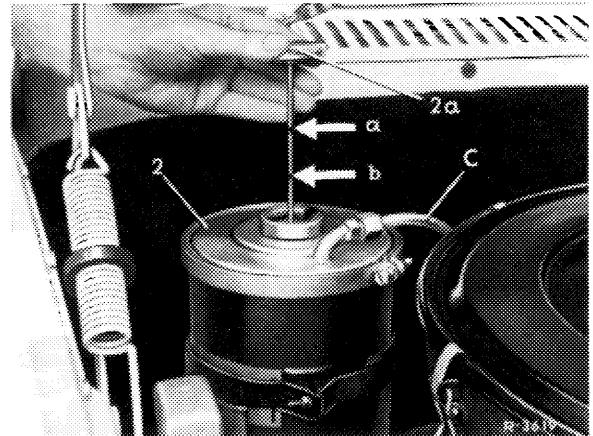

2 Fluid reservoir
2a Cover and dipstick
a Max. marking
b Min. marking

C Return flow line from level control unit to fluid reservoir