


All models

Tightening torque	Nm	(kpm)
Fastening bolts for oil pan with cork_gasket	8	(0.8)
oil pan with rubber gasket	7	(0.7)

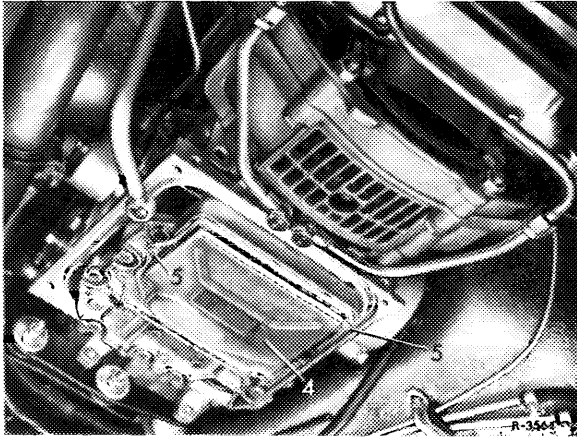


Transmission Version K 4 C 025, K 4 C 025 reinforced, K 4 A 040, W 3 A 040, W 4 B 025

### Note

Replacement of oil filter and oil change are completed at the same time (refer to item 170).

- Remove transmission oil pan after draining oil.
- Replace oil filter.
- Mount transmission oil pan with new gasket, while tightening fastening bolts to specified tightening torque.
- Add oil (refer to job no. 170).

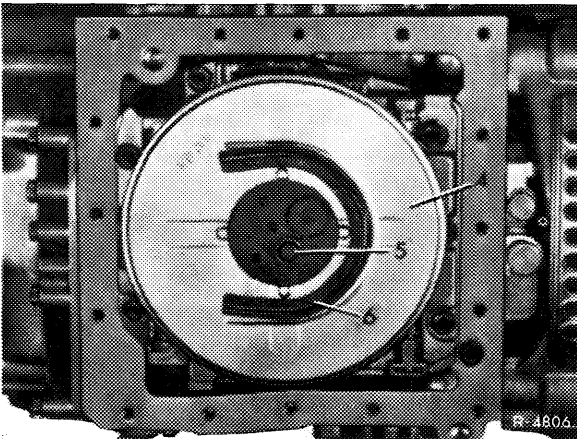

Transmission version K 4 025, K 4 B 050