


All models


**Note:** When performing this job number, the engine compartment lower panel or the noise encapsulation panel must be removed, and replaced after completing all maintenance work (refer to job number 6190 or 9400).

Retighten bolts/self-locking nuts of exhaust flange connections. Torque to 20 Nm.


On vehicles with V-engines, retighten exhaust flange connections on left and right sides.

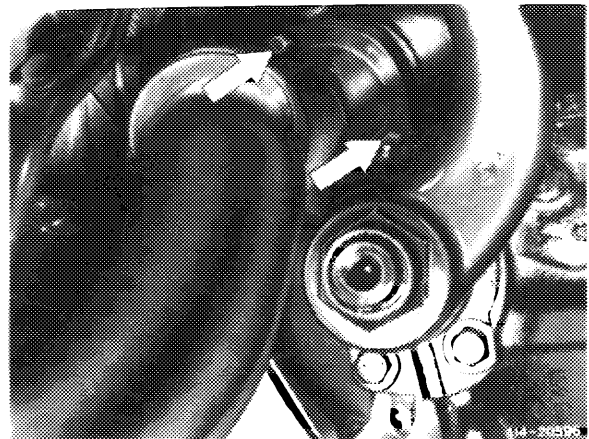


Model 107.025.045 048 (left hand side)

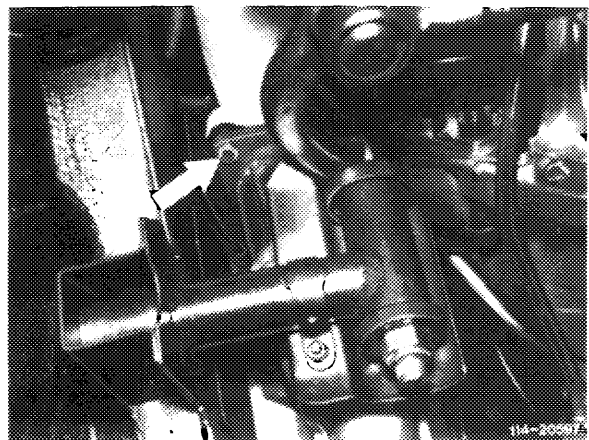


Model 107.025/045/048 (right hand side)

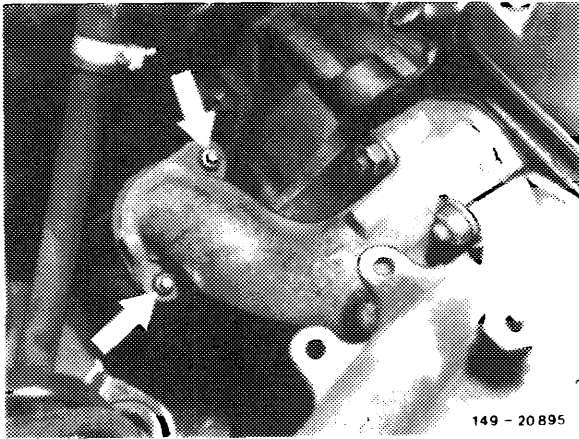


Model 123.123/130/150/190

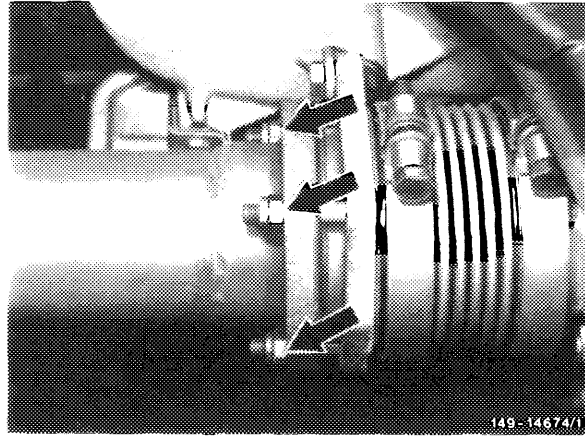


Model 123.133/153/193, 126.1

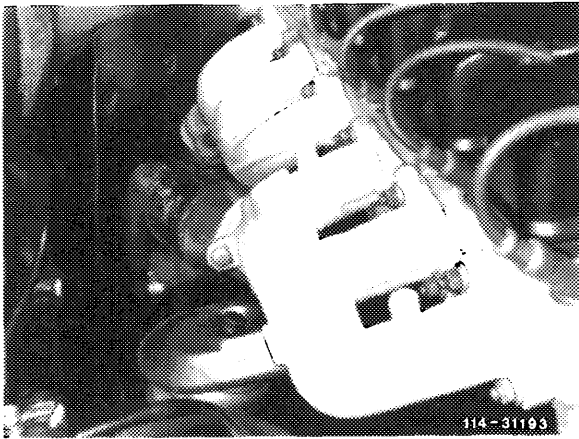


Model 124.026/030/05/090, 126.024/025, 201.029

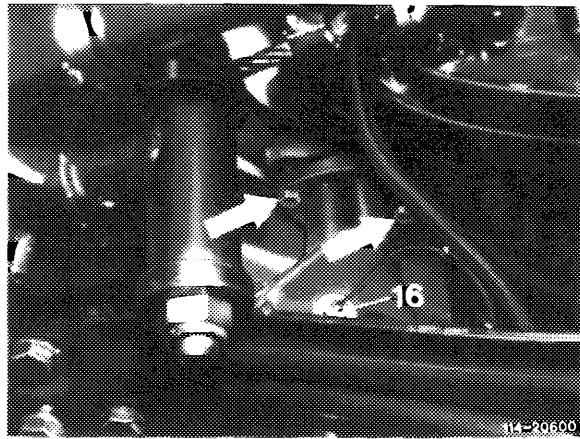


Model 126.03/04

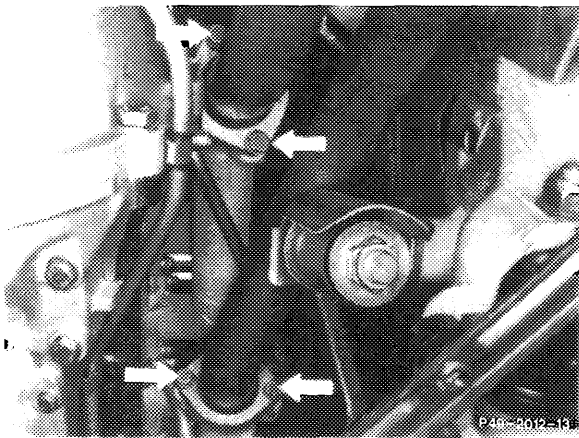


Model 129.061

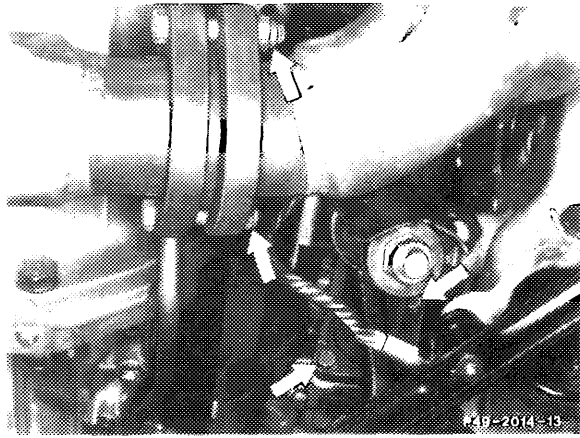


Model 129.066

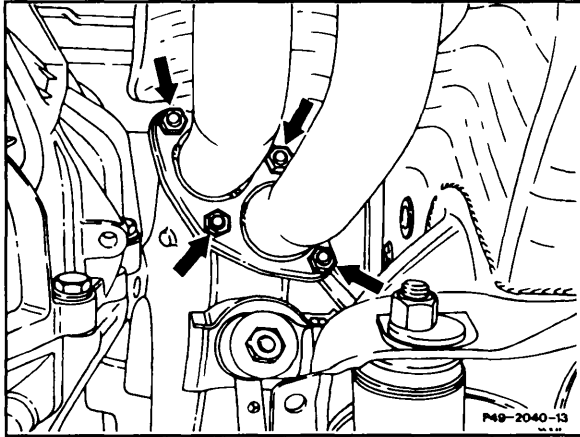


Model 201.02 up through 09.1984  
(Non-catalyst model shown for location of bolts.)

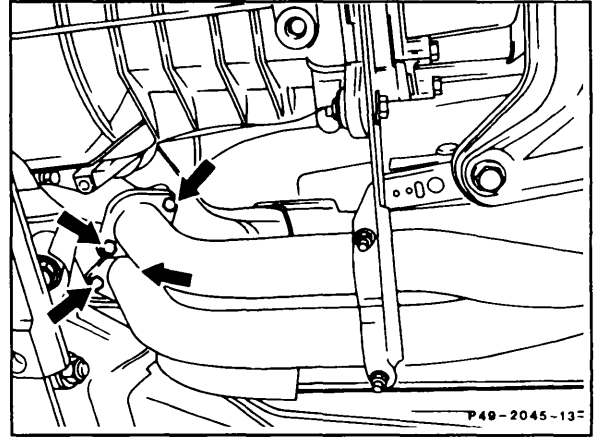


Model 201.02 as of 10.1984 and 201.03  
(Non-catalyst model shown for location of bolts.)

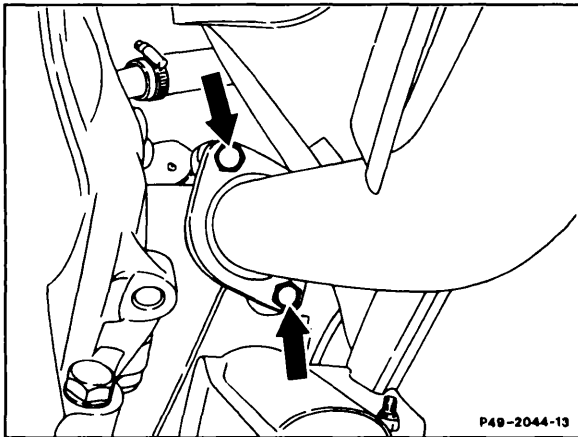


Model 201.122/126

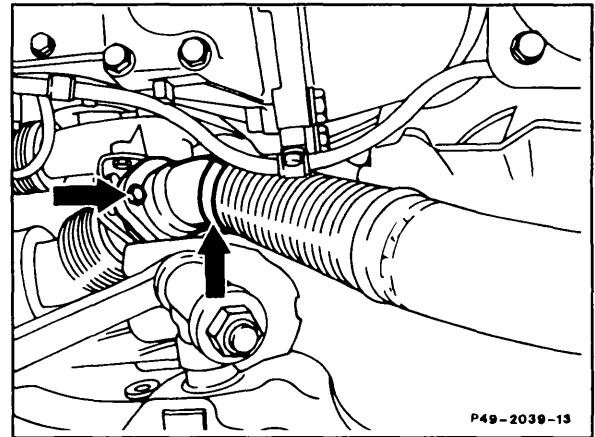


Model 124.133/193, 201.128

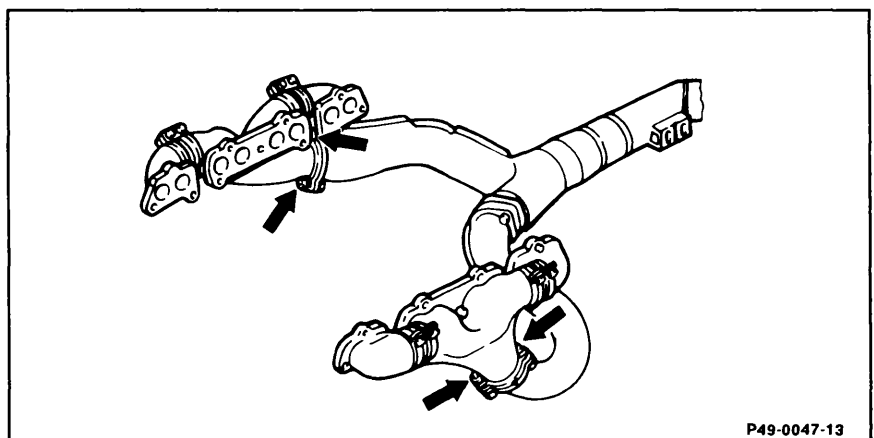

Model 124.034/036

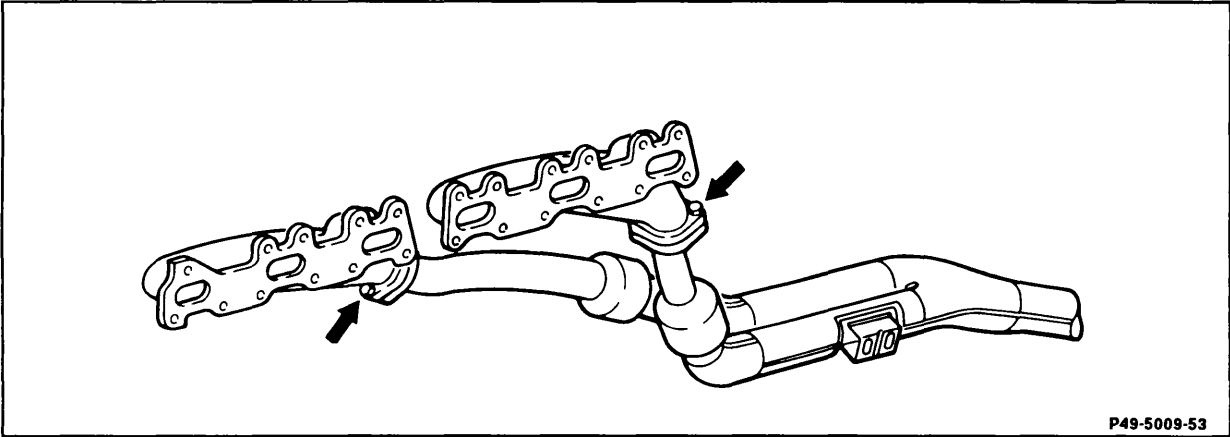

Model 140.03

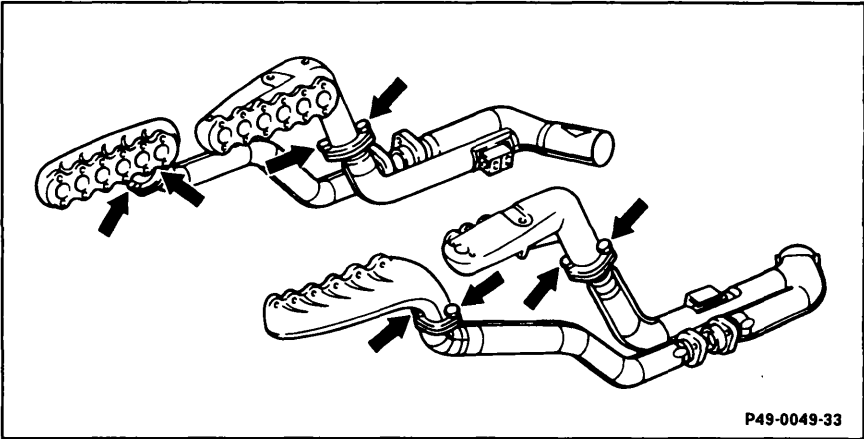

Model 140.057