


All models

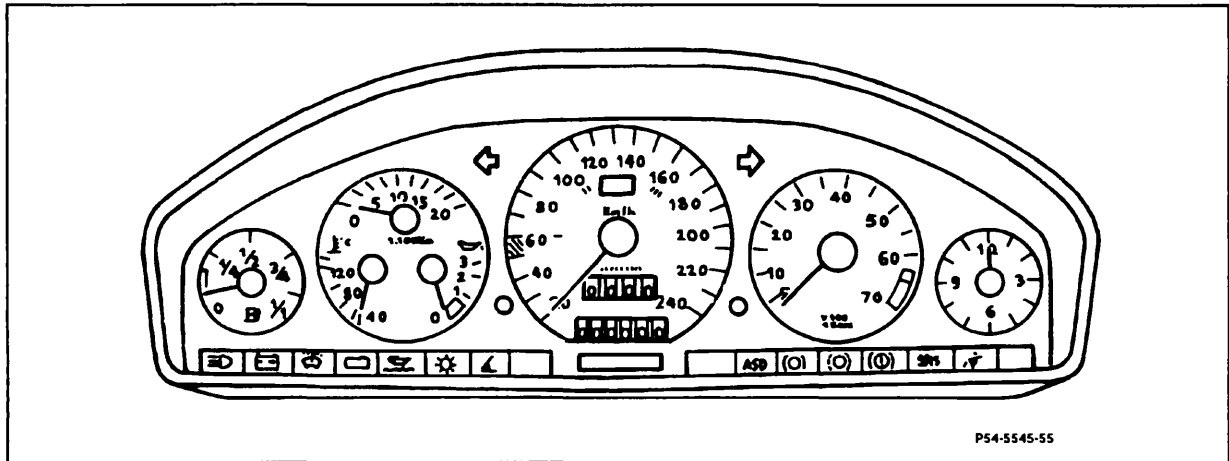

Functional check - Ignition key in position 2.

- Check warning lamps:
- Check indicator lamps:

Fuel reserve (starting 09.1982).

charge indicator lamp

Brake pad wear indicator

ABS

Pre-glow

ETR, SRS Airbag - restraint system - should go out after approx. 10 s.

O₂ sensor replacement up thru model year 1985

O₂ sensor failure indicator starting model year 1986 (except 201.024) lights up briefly when switching ignition on.

Turn signal lamp left and right

Headlamp flasher

Parking brake and brake fluid level

Engine oil level indicator

Coolant level indicator

Washer fluid level indicator

Bulb failure warning unit.

Seat belt/backrest lock warning lamp

4MATIC function indicator

4MATIC warning lamp

Roll bar indicator lamp

Oil pressure warning lamp

CHECK ENGINE lamp