

Model 140

- Using screwdriver, turn latches (arrows) 90° to left.
- Lower cover with recirculating air filter (2).
- Unclip recirculating air filter from cover.
- Open recirculating air filter housing and remove filter.

**Note:**

Recirculating air filters can not be cleaned, they must be replaced.

