


Model 107 up through 07.1985
123
126 up through 08.1985
201 up through 12.1984

Special tools

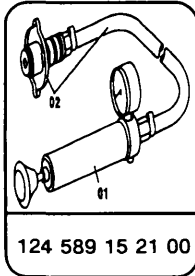

Commercial tools

7 mm hex. socket wrench on flexible drive
for worm drive hose clamps.

obtain locally

Warning! Perform leak test on cold engine only!

Check hoses for porosity, hardening, swelling, cracks or chafing marks and correct routing. Replace defective hoses.

- Apply pressure of 1.0 to 1.3 bar gauge to cooling system.
- Check all hoses and connections for leakage.
- Retighten hose clamps, if required.
- Replace corroded hose clamps.
- Replace a corroded radiator/expansion tank cap.

